


*Thank you for choosing*

# Panasonic OmniVision **VHS**

MODEL PV-7664

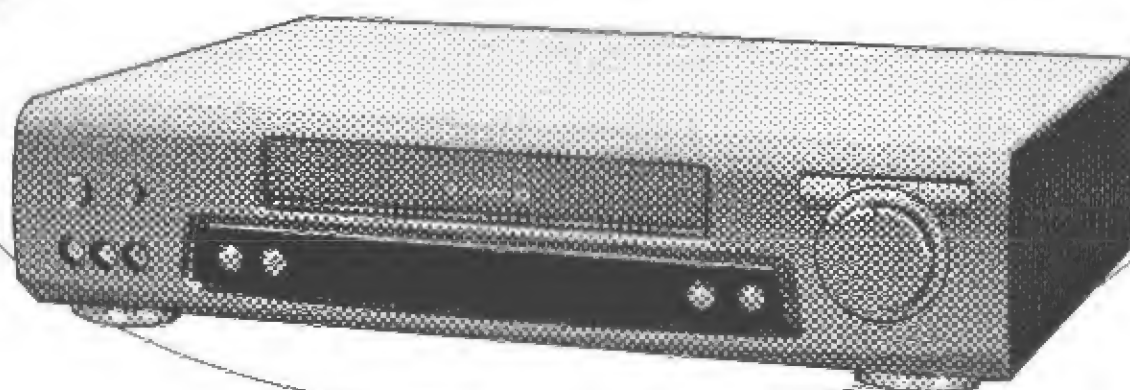

Video Cassette Recorder



## Operating Instructions

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.

Spanish Quick Use Guide is included. (Guía para rápida consulta en español está incluido.)

Quick Use Guide is on the back cover.

# Things You Should Know

## Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information at right. The serial number is on the tag located on the back of your VCR.

 

Date of Purchase \_\_\_\_\_  
Dealer Purchased From \_\_\_\_\_  
Dealer Address \_\_\_\_\_  
Dealer Phone No. \_\_\_\_\_  
Model No. **PV-7664** \_\_\_\_\_  
Serial No. \_\_\_\_\_

## Safety Precautions

**Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.**

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.

FCC Warning: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

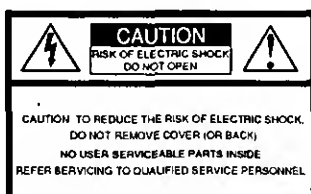

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

## Table of Contents

Important Safeguards and Precautions .....	3
Unpacking Your VCR • Product Features .....	4
VCR and Cassette Information (Record Tab, Tape Speeds, Head Cleaning, D.S.T., Specifications) .....	5

### Connections

Basic Connection (Antenna and VCR, VCR and TV) .....	6, 7
Additional Connections (CATV, Audio/Video) .....	8, 9

### Getting Started

Location of Controls (Remote Control, VCR) .....	10, 11
One Time VCR Setup (On-Screen Language, Cable Box/ DSS Receiver Setup, Channel Memory, Auto Clock Set) .....	12~17
On-Screen Displays (OSD) (Function, Channel, Menu, VCR Status & Clock, Warning) .....	18

### Basic Operation

Playback a Tape (Main Operation, Special Effects, Quality Picture Features) .....	19
Record On a Tape (Main Operation, One Touch Record, Channel Selection) .....	20
Copying Your Tapes (Dubbing) (Connection, Main Operation, Monitoring, Select Input Mode) .....	21
Timer Recording (Main Operation, Cancel, Clear or Replace Program Contents) .....	22, 23

### More You Can Do

Tape Operation (Commercial Advance, Repeat Play, Zero Search, Shuttle Search, Auto Functions, Index Search) .....	24~30
Special VCR Features (VCR Lock, Warning Beeper) .....	31
MTS Broadcast/ VHS Hi-Fi Stereo System (Stereo/SAP/Mono Broadcast, Select Audio Mode, Spatializer) ...	32, 33
VCR Plus+ Setup (VCR Plus+ Channel Setup) .....	34
VCR Plus+ Programming (Main Operation, Make Correction) .....	35
Multi-Brand Control Feature .....	36, 37

### Other Information

Before Requesting Service (Self-check items) .....	38
Service Center List .....	39
Warranty .....	40
Spanish Quick Use Guide .....	41~43
Quick Use Guide .....	Back Cover

# Important Safeguards and Precautions

**FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT**

## INSTALLATION

### 1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual.

If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

### 2 POLARIZED OR GROUNDING PLUG

As a safety feature, this Video product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

#### POLARIZED PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

#### GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

### 3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic.

If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected.

Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician.

Overloaded outlets and extension cords are fire hazards and should be avoided.

### 4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes.

For protection, follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

### 5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near any kind of heater or regulator, in direct sunlight, inside a closed vehicle, etc.. Do not move the unit suddenly between areas of extreme temperature variation. If the unit is suddenly moved from a cold place to a warm place, moisture may condense in the unit and on the tape.

### 6 TO AVOID PERSONAL INJURY


- Do not place unsecured equipment on a sloping surface.
- Support for the unit should be firm, level, and adequately strong.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.



## OUTDOOR ANTENNA INSTALLATION

### 1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

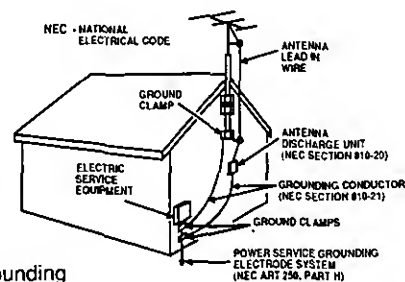

### 2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

## USING THE VIDEO UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

### 1 KEEP THIS VIDEO UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

**2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT,** unplug the unit and have it inspected by a qualified service technician before use.

### 3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

### 4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. **DO NOT OPERATE** if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

### 5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

### 6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. **DO NOT USE** cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

## SERVICE

### 1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.

### 2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

### 3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK


After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to insure that the video unit is in safe operating condition.

# Unpacking Your VCR • Product Features


## Unpacking Your VCR

The accessories below are provided to help you use or set up your VCR.

### Accessories

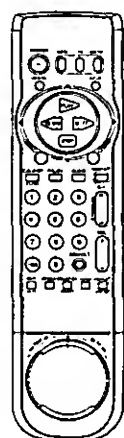

Remote Control  
VSQS1498

 

3 "AAA"  
Batteries




RF Coaxial  
Cable  
VJAS0183


To order accessories,  
call toll free 1-800-332-5368.

## Loading the Batteries


**1** Push in and up on the latch with your thumb nail and lift off the lid.

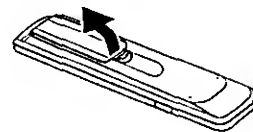

**2** Install three batteries as indicated inside the Battery Compartment.

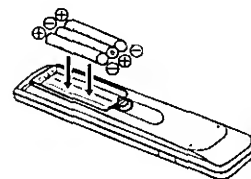

**3** Fit the lid's hinge piece into the indent on the case, and snap the lid into place.

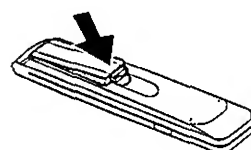


### Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

## Product Features

 Advanced Noise Reduction .....	19
All Channel Auto Set/ 181-CH TV/CATV Tuner .....	14, 15, 16
Auto Clock Set .....	14, 15, 16
Auto Daylight Saving Time .....	5
Auto Features for a Quality Picture .....	19
Auto Operation Functions (Auto Playback, Rewind, Tape Eject, Power off) .....	29
Auto Repeat Function .....	28
Cable Box Channel Control .....	13
Color Noise Reduction .....	19
Commercial Advance .....	24~27
Digital Auto Picture .....	19
DynAmorphous™ Metal Head .....	19
Easy-to-Read English/Spanish/French On-Screen Displays .....	14~17, 22, 23
Front-mounted A/V In Terminals .....	21
Head Cleaner .....	5
MTS Broadcast System (Multi-channel Television Sound-Stereo, SAP, Mono) .....	32
Multi Brand TV/Cable Box Remote Control .....	36, 37
One Month, 8 Program Timer Recording .....	22, 23
One Touch Recording (OTR) .....	20
Program Director Remote Control .....	22, 23
Shuttle Search .....	29
Spatializer .....	33
Special Effects Playback .....	19
Special VCR Features (VCR Lock, Warning Beeper) .....	31
VCR Plus+ Recording .....	34, 35
VHS Hi-Fi Stereo System .....	33
VHS Index Search System (Direct Access Search, Index Scan Search) .....	30
Zero Search .....	28




# VCR and Cassette Information

## Erase Protection (Record Tab)

Cassettes have a record tab to ensure that recordings are not accidentally erased.

 To prevent accidental erasure, break off the tab with a screwdriver.



To record again, cover the hole with cellophane tape.



## Maximum Record/Playback Time

Only use tapes with the **VHS** mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

## Build-in Head Cleaner

A clean video head helps produce a clear picture. So, we have equipped your VCR with a built-in, non chemical head cleaning system that helps prevent clogging of the video heads. Cleaning is performed each time you load or unload a video cassette.

**Note:** This feature is preventative only. If your video heads are seriously clogged, consider the use of a chemical nonabrasive head cleaning kit or take your VCR to a Service Center.

## Head Cleaning

Your VCR will not normally require head cleaning, however the heads may become clogged when playing an old or damaged tape.

### Video Heads Sensor System

If head cleaning becomes necessary, the VCR will display the screen at right while playing back a recorded signal.

To exit this screen, push PLAY on the remote control or VCR.

- Use "dry" type head cleaning cassette\* only.
- Be sure to follow the cleaning tape instructions carefully. Excessive use of a cleaning cassette can shorten head life.
- If using a head cleaning cassette does not solve the problem, contact your nearest Factory Service Center or authorized Service Center.

VIDEO HEADS MAY  
NEED CLEANING  
PLEASE INSERT HEAD  
CLEANING CASSETTE  
OR REFER TO MANUAL

END:PLAY KEY

## Reset all VCR Memory Functions

Use when moving the VCR to a new location, or if a mistake was made in the One Time VCR Setup section.


- Make sure a tape is not inserted in the VCR.

- 1) Turn VCR Power on.
- 2) Push and hold both PLAY and CHANNEL ▲ on the VCR for more than 5 seconds.
  - The power will shut off.
- 3) Perform the One Time VCR Setup section on page 14.

## D.S.T. (Daylight Saving Time)


### Spring (First Sunday in April)

When the VCR is set to DST:ON, it automatically adds one hour and adjusts the clock.

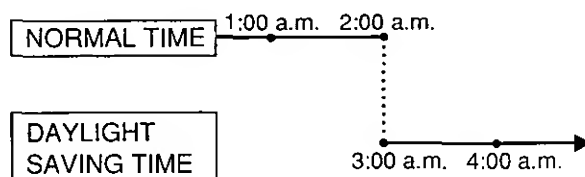

### Autumn (Last Sunday in October)

When the VCR is set to DST:ON, it automatically turns back one hour and adjusts the clock.

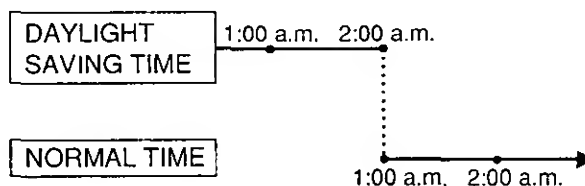

## Specifications

<b>Power Source:</b>	120V AC, 60 Hz
<b>Power Consumption:</b>	Approx. 23 watts (Power on) Approx. 7 watts (Power off)
<b>Video Signal:</b>	EIA Standard NTSC color
<b>Video Recording System:</b>	4 rotary heads helical scanning system
<b>Audio Track:</b>	1 track (Normal) 2 channel (Hi-Fi Audio Sound)
<b>Tuner:</b>	
<b>Broadcast Channels:</b>	VHF 2~13, UHF 14~69
<b>CATV Channels:</b>	Midband A through I (14~22) Superband J through W (23~36) Hyperband AA~EEE (37~64) Lowband A-5~A-1 (95~99) Special CATV channel 5A (01) Ultraband 65~94, 100~125
<b>Operating Temperature:</b>	41°F~104°F (5°C~40°C)
<b>Operating Humidity:</b>	10%~75%
<b>Weight:</b>	7.7 lbs. (3.5 kg)
<b>Dimensions:</b>	16-15/16" (W) x 3-7/8" (H) x 11-13/16" (D) 430 (W) x 98 (H) x 300 (D) mm


Note: Designs and specifications are subject to change without notice.



# Basic Connection


## ANTENNA

INDOOR  
ANTENNA

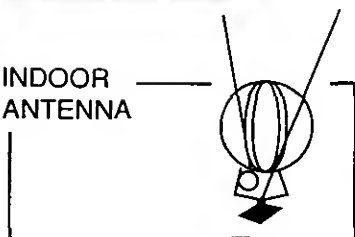


or

OUTDOOR  
ANTENNA

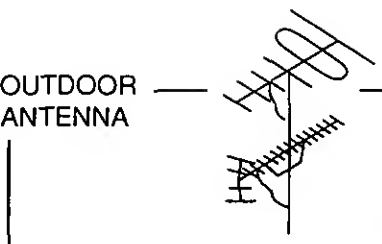


or

Cable TV

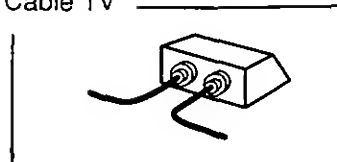

Disconnect the antenna or cable  
from your TV and connect it to the  
VCR (IN FROM ANT.)


VCR

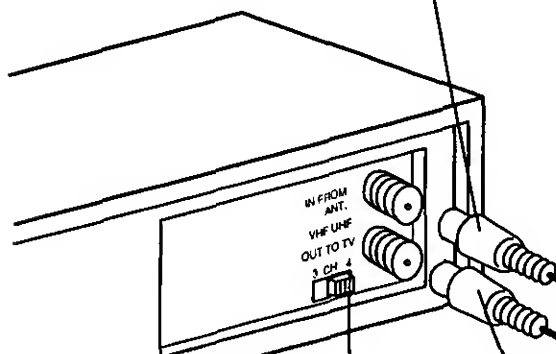

Set the Output Channel  
of your VCR  
to channel 3 or 4 (whichever is not being  
transmitted on by a Local TV broadcast).

Antenna Cable

TV

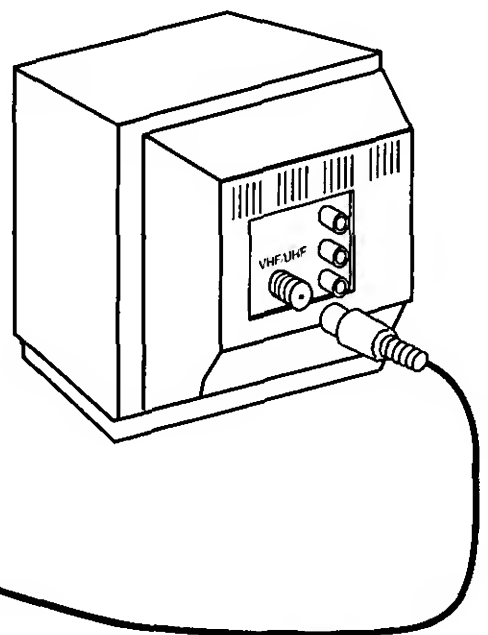

RF Coaxial Cable  
(VCR-TV Connection Cable) (supplied)


Connect the VCR to your TV  
with the RF Coaxial Cable (OUT TO TV).

### WARNING


When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

## Between Antenna and VCR


### Case 1: Twin Lead Cable Only

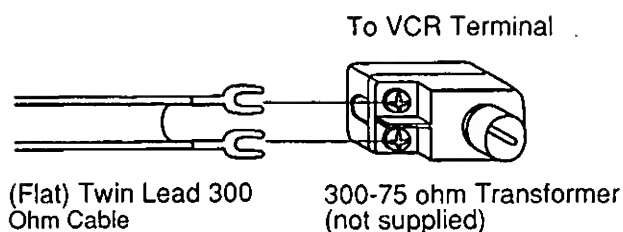

### Case 2: Twin Lead & Coaxial Cables

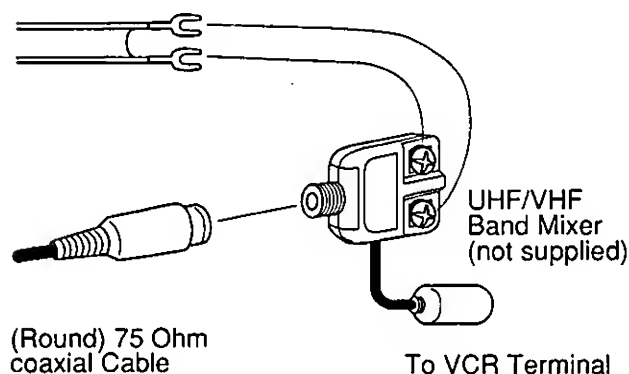


### Case 3: Two Twin Lead Cables

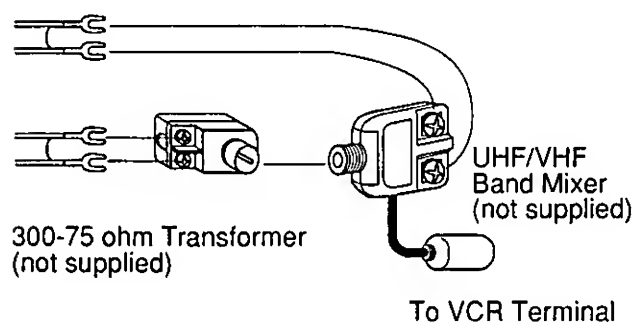


- If your TV has both post and plug-type VHF terminals, the post connection is recommended to minimize signal loss.

## Between VCR and TV


### Case 1: Screw & Plug Type Terminal

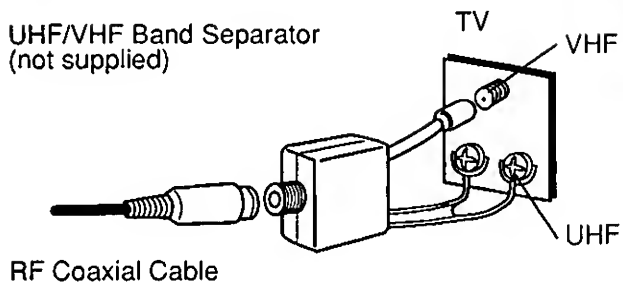

### Case 2: Screw Type Terminal

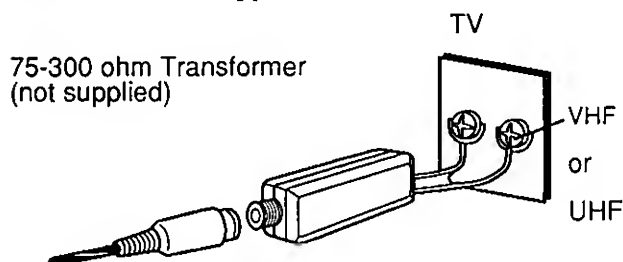


### Case 3: Double Screw Type Terminal

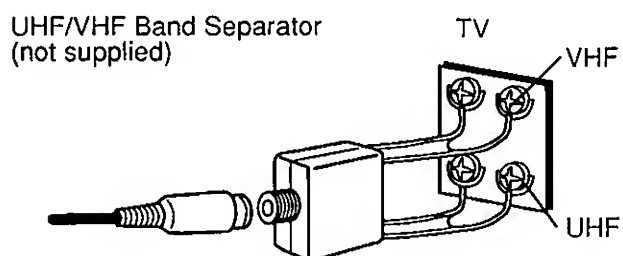

### Case 4: Complex TV Terminal

TERMINALS ON BACK OF TV SET

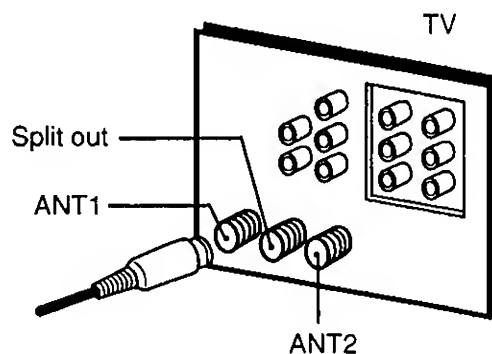

- Connect to one of the ANT terminals and select the same antenna number on the TV.



# Additional Connections

## CATV(Cable) Connections

All connections on this page are made with 75 Ohm coaxial cables.


### Without a Converter/Descrambler Box

You can:

- 1) Use your VCR Remote Control to select channels.
- 2) Program one or more unscrambled channels for unattended recording.

You cannot:

record or view scrambled channels with this connection.

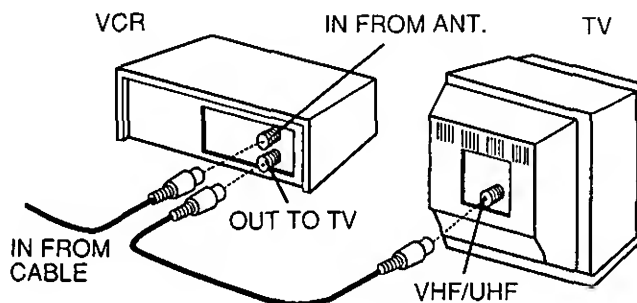


### With a (CABLE to VCR) Converter/Descrambler Box

You can:

- 1) Record and view any channel including scrambled channels; channel selection must be made at the Cable TV Converter Box.
- 2) Program one channel for unattended recording.

You cannot:

select channels from VCR or TV.

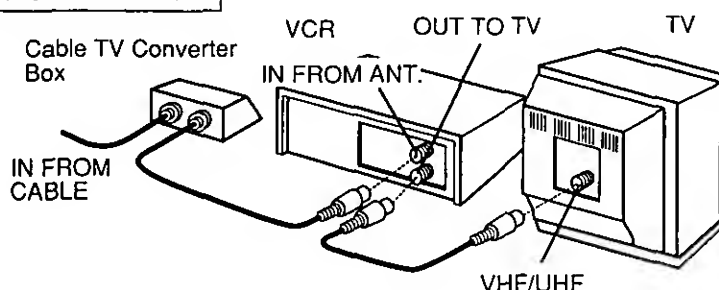


### With a (VCR to TV) Converter/Descrambler Box

You can:

- 1) Use your VCR Remote Control to select channels.
- 2) Program unattended recordings of more than one unscrambled channel.


You cannot:

record scrambled channels with this connection.

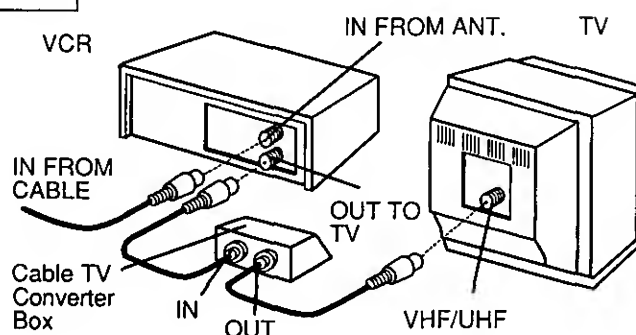

### With Two Converter/Descrambler Boxes

If you want to record and view a combination of scrambled and unscrambled channels, you will need additional equipment. This connection requires two converter boxes, an A/B switch, and a 2-way splitter as shown here.

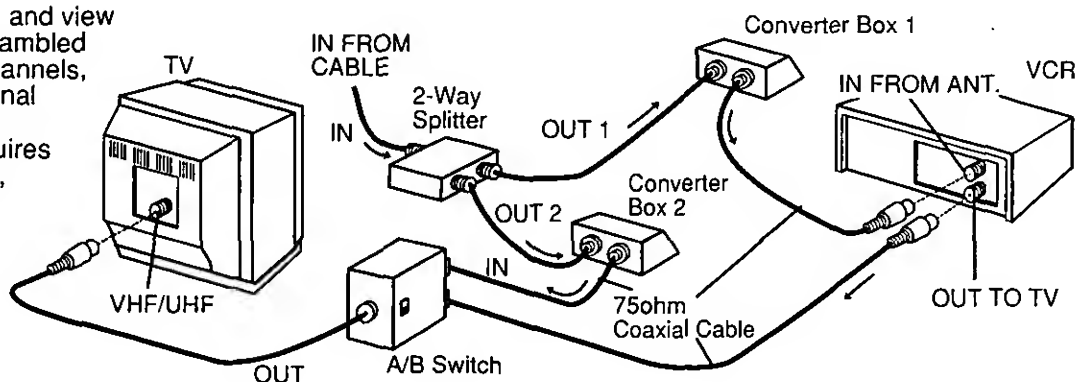




## With a DSS Receiver

You can:

- 1) Record and view any channel including scrambled channels; channel selection must be made at the DSS Receiver.
- 2) Program one channel for unattended recording.

NOTE: The DSS receiver must be turned off to view programs from a cable box or antenna. See the DSS manual for details.

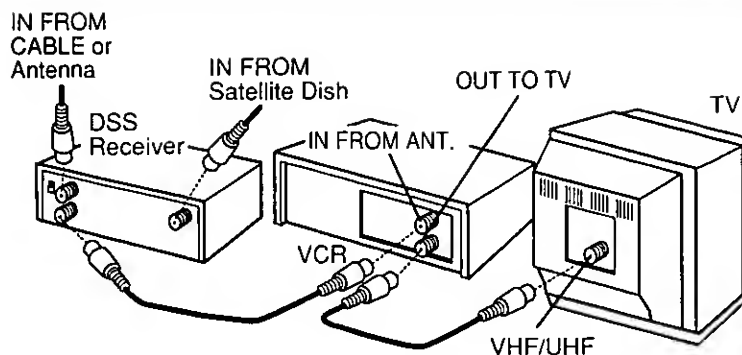


\*\*DSS® is a registered trademark of DIRECTV, INC., a unit of GM Hughes Electronics.

## Audio/Video Connections

If your TV has AUDIO IN and VIDEO IN terminals, you can connect your VCR to them to receive a higher quality picture and sound. If your TV is not stereo, you can connect a stereo amplifier to the VCR to enjoy stereo sound.

### Audio/Video Connections

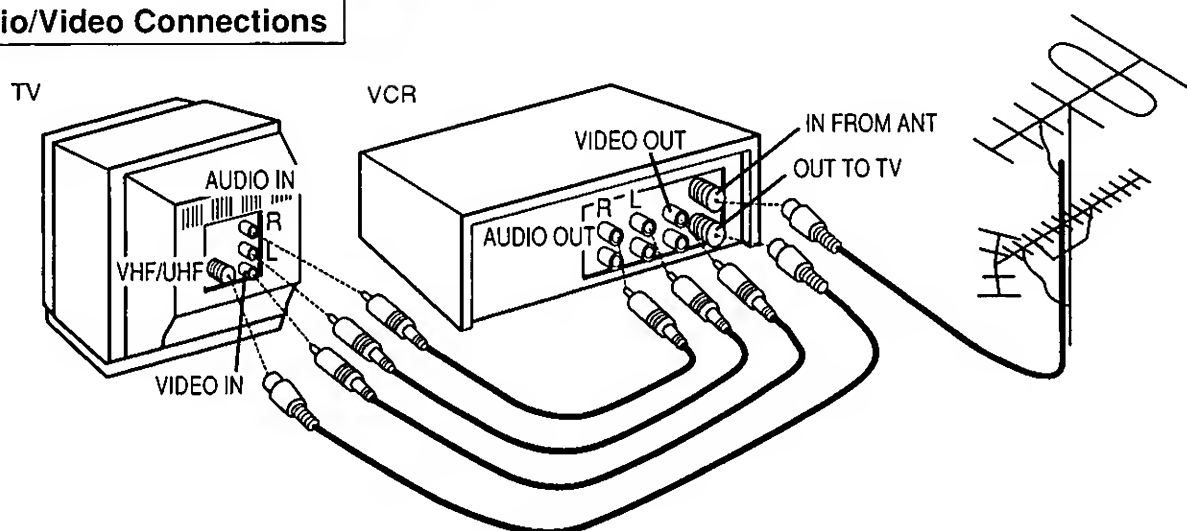


- 1 Connect the VIDEO OUT terminal on the VCR to the VIDEO IN terminal of your TV.
- 2 Connect the "L" and "R" AUDIO OUT terminals on the VCR to the "L" and "R" AUDIO IN terminals of your TV.
- 3 Set the VIDEO/TV selector of your TV (Monitor/Receiver) to "VIDEO."

NOTE: To use your TV as a VCR monitor, set the VIDEO/TV selector on the TV (Monitor/Receiver) to "VIDEO." Use the L Audio In jack for proper sound reproduction when connecting to a monaural TV.

### Stereo Amplifier Connections


When you connect your VCR to a Stereo Component System, you can view the picture from the VCR while enjoying stereo from your audio system.

Connect the "L" and "R" AUDIO OUT terminals on the VCR to the "L" and "R" AUDIO IN terminals of your stereo.

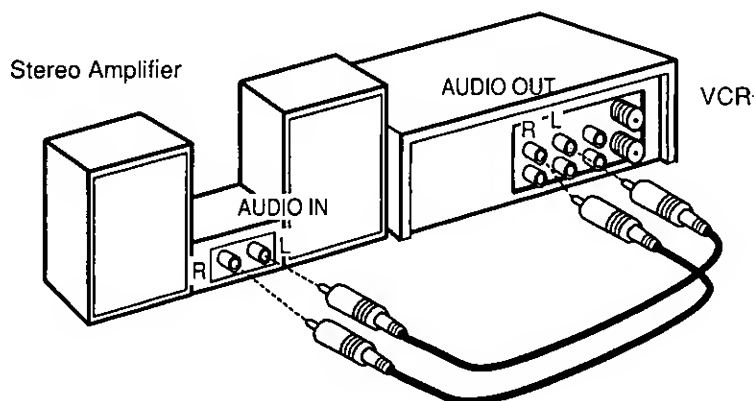


Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

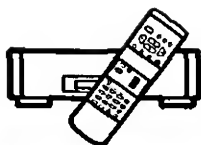


# Location of Controls


## Remote Control Buttons

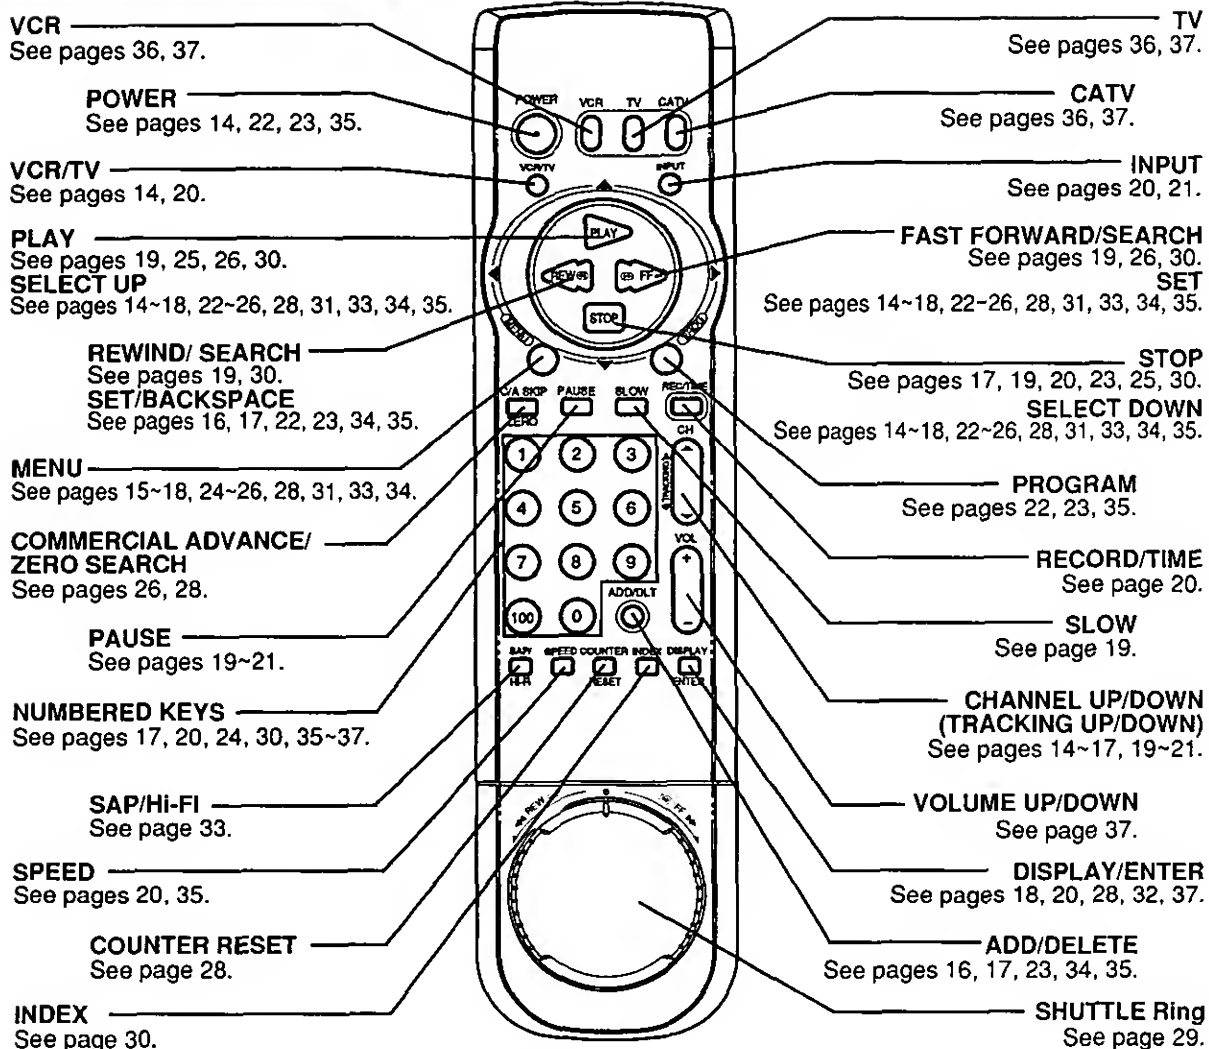

## Front View of the VCR

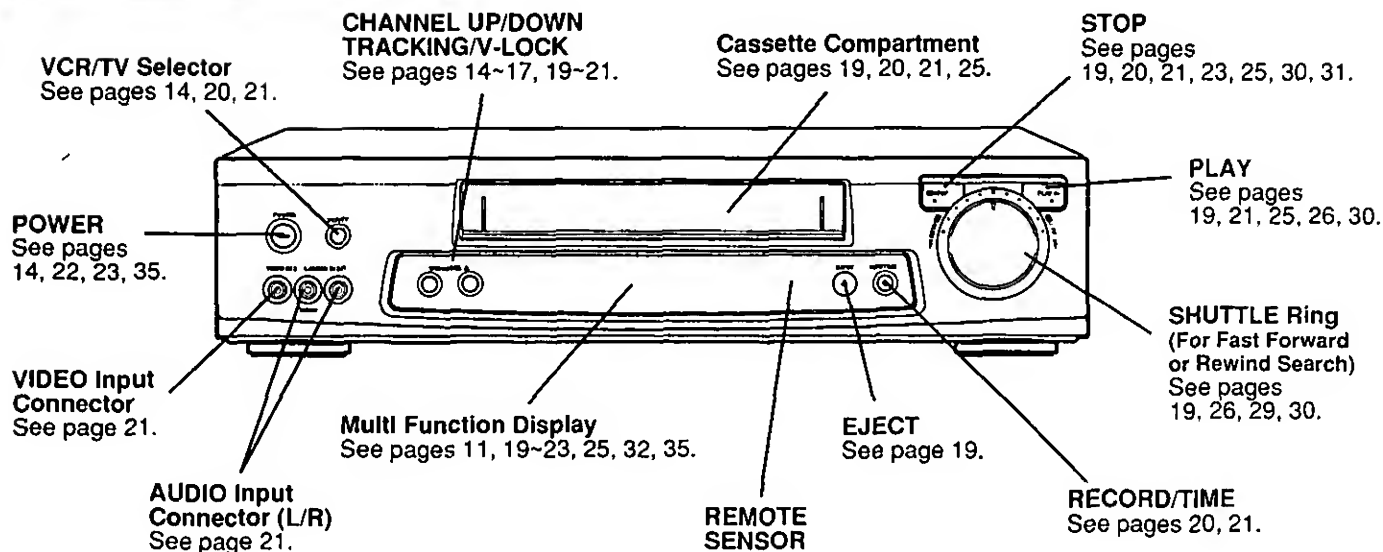


## Multi Function Display

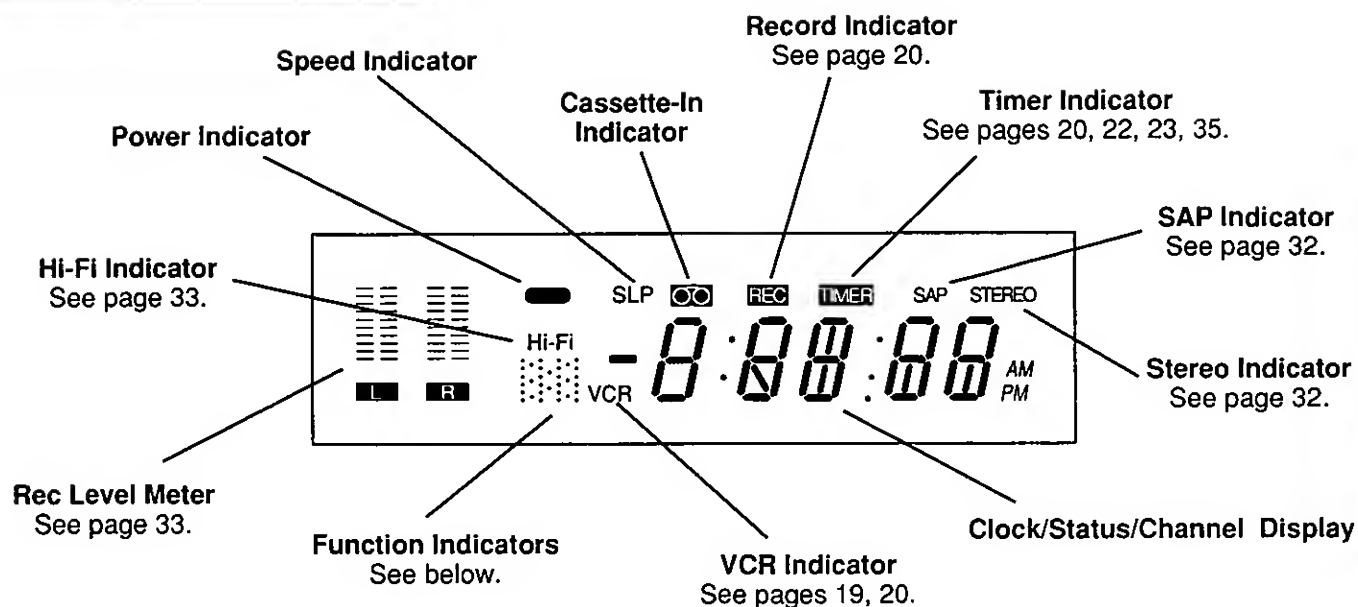

<b>Play/ Slow/ Frame Advance</b>		<b>Reverse Play (Slow/ Frame Advance)</b>		<b>Rewind/ Rewind Search</b>		<b>Fast Forward/ Fast Forward Search</b>	
<b>Record</b>		<b>Record/ Pause</b>		<b>Still</b>		<b>Eject</b>	

## Rear View of the VCR

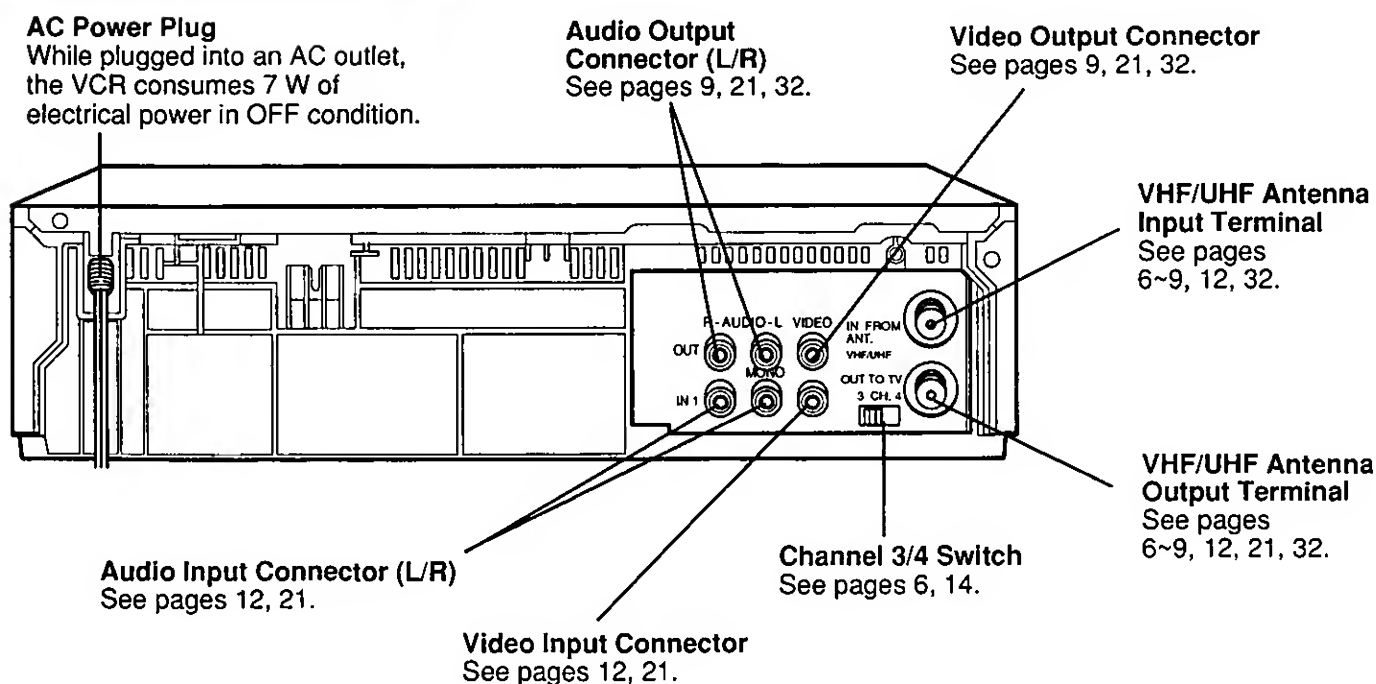

# One Time VCR Setup

The setup on pages 14 through 16 is vital for proper VCR operation. Please read the instructions carefully and in the order presented.

NOTE: These first two pages contain reference material needed for setup on pages 14 ~16. Please look over the information before you begin setup procedure.

## **Setup Overview**

You will be performing the following tasks:


- Setting the language you want on-screen displays to appear in (English, Spanish, French).
- Telling the VCR what kind of equipment you are using to receive channels and how it is connected.
- Entering pertinent cable box or DSS receiver information if used.
- Entering a local PBS channel so that the VCR can receive auto clock set data. (Not available in all areas.)
- Placing channels in memory and setting the clock.

## **Please Note Which Connection Type You are Using.**


Make sure all equipment is hooked up as described on pages 6~9. The diagrams below illustrate some of the basic connection types. Confirm which type you used for later reference.

### **Connection Type 1**

#### **A.<CABLE BOX ->VCR ->TV>**

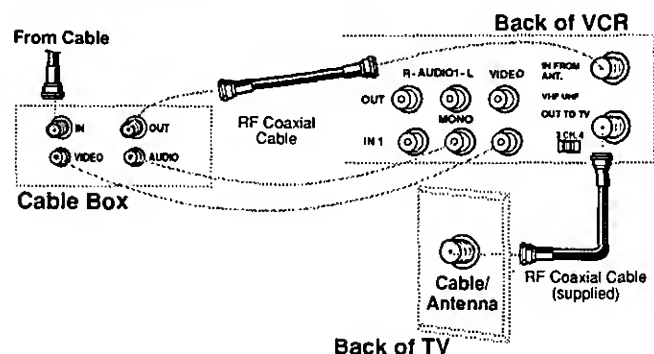


#### **B.<ANT/CABLE BOX ->DSS BOX ->VCR ->TV>**

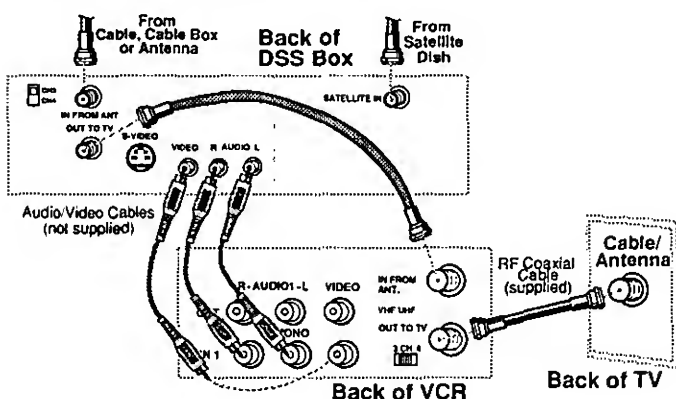


### **Connection Type 2**

#### **C.<VCR ->TV>**

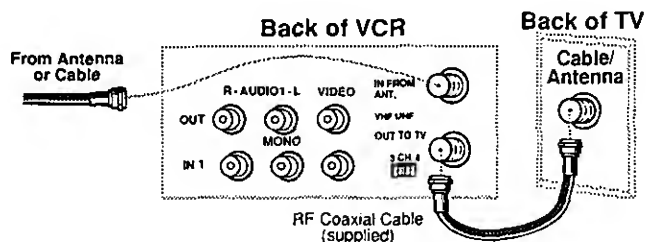

#### **D.<VCR ->CABLE BOX ->TV>**

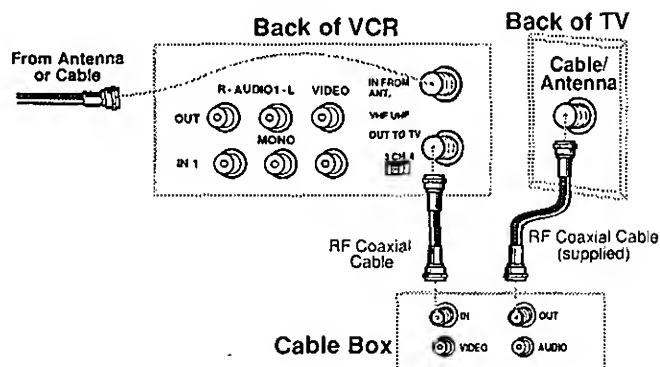

## **ONE TIME SETUP IMPORTANT NOTES:**

- For detailed DSS receiver connection instruction, please see your DSS operating manual.
- The DSS receiver must be turned off to view programs from the cable box or antenna.
- If you use a DSS receiver, it must be turned off for auto clock set.
- If your cable box is not remote controllable, it must be tuned to your PBS channel.
- If you use Audio/Video Jack connection between the VCR and cable box or DSS receiver, you must also connect the RF coaxial cable in order to use the auto clock set and channel auto set features.

## Cable Box/ DSS Receiver Code Number List

If your cable box or DSS receiver is remote controllable, refer to this list during setup on page 14.

### **Cable Box**

Brand	Code Numbers
Archer .....	01, 29, 44, 88, 91
Cableview .....	30, 42, 44, 52, 63, 88
Citizen .....	30, 42, 44, 52, 63, 88
Curtis .....	08, 09, 56, 61, 87, 90
Diamond .....	01, 29, 44, 88, 91
Drake .....	37, 67, 71
Eagle .....	13, 20, 22, 26, 40, 58, 62
Eastern .....	28
GC Brand .....	30, 42, 44, 52, 63, 88
Gemini .....	04, 85
General Electric .....	57
General Instruments .....	01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95
Hamlin .....	14, 15, 28, 41
Hitachi .....	31, 79
Jerrold ....	01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95
Macom .....	31, 79
Magnavox .....	25, 26
Movietime .....	29, 32, 38, 39, 40, 42, 44, 88
NSC .....	32, 38, 40
Oak .....	11, 46
Panasonic .....	16, 17
Philips .....	13, 20, 23, 24, 96
Pioneer .....	05, 06, 78
Pulsar .....	30, 42, 44, 52, 63, 88
RCA .....	16, 17
Realistic .....	44, 51, 88
Regal .....	14, 41
Regency .....	28

Brand	Code Numbers
Rembran .....	29, 32, 39, 42, 44, 88
Salora .....	68, 72
Samsung .....	32, 40, 42, 78, 94
Scientific Atlantic .....	08, 09, 56, 61, 87, 90
Sheritech .....	27
SL Marx .....	32, 40, 42, 78, 94
Spucer .....	16, 17
Stargate .....	30, 32, 40, 42, 44, 52, 63, 78, 88, 94
Sylvania .....	19
Telecaption .....	77, 92
Teknika .....	74
Teleview .....	32, 40, 42, 78, 94
Texscan .....	18, 19
Tocom .....	01, 33, 34, 42, 48, 49, 91
Toshiba .....	36
Uniden Satellite .....	65, 69
Unika .....	01, 29, 44, 88, 91
Universal .....	42, 43, 44, 52, 63, 88
Viewstar .....	13, 20, 22, 26, 40, 58, 62
Vid Tech .....	64
Vidter .....	64
Videoway .....	07, 23, 50
Zenith .....	07, 23, 50


### **DSS (Digital Satellite System Receiver)**

Sony .....	98
RCA .....	99
Panasonic .....	100

Note: During setup you will be instructed to enter your brand code number. As some brands have multiple codes, it may be necessary to try different codes to attain the proper results. These codes are for Cable box or DSS Box setup for Auto Clock and VCR Plus+ recording only. For TV/Cable Box Multi-Brand Control operation, please see page 34.

## Positioning Your Cable Box or DSS Receiver

If your cable box or DSS receiver is remote controllable, place it on or near the VCR as shown in the example below. The VCR transmits an infrared signal from two locations. Be sure not to cover the transmitter windows.

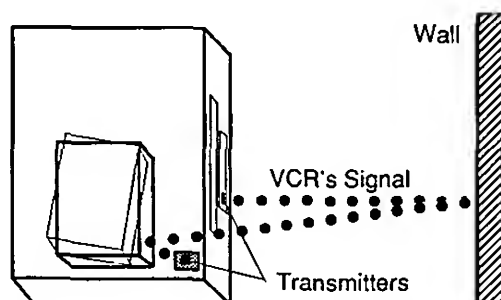


# One Time VCR Setup (continued)

When the VCR power is first turned on, the language select screen appears automatically. Follow along in the manual as you guided are through the setup procedure on the screen.

## Check list before you begin.

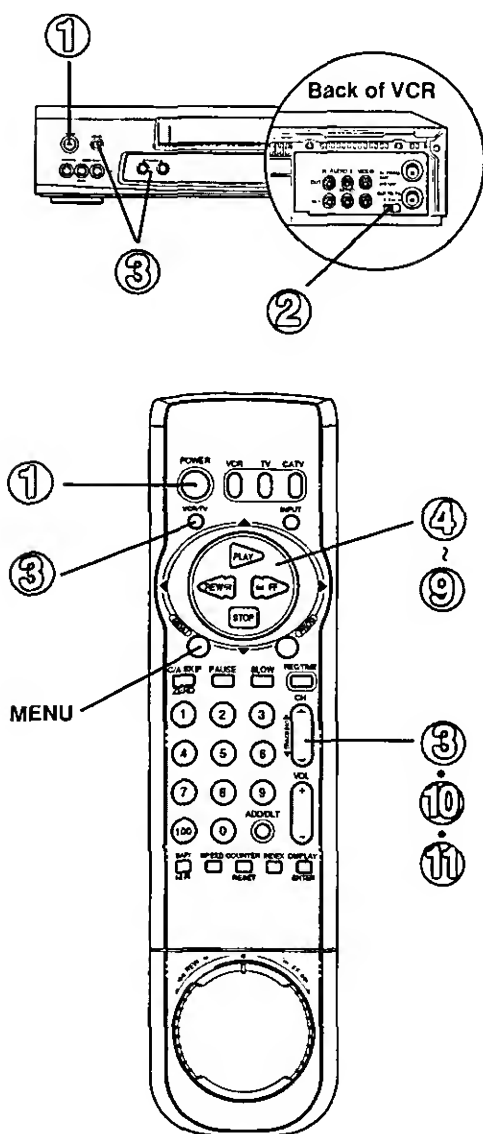


- ☐ All TV and VCR connections are made. (See pages 6~9.)



## On Screen Language, Cable/ DSS Receiver Setup, Channels Memory, and Auto Clock

 - ①  Turn TV and VCR on.


- ② Tune TV to VCR output channel (the same one you set on the back of the VCR: CH3 or CH4).

- ③  Push CH ▲ for English on-screen displays.  
or  
 Push CH ▼ for Spanish on-screen displays.  
or  
 Push VCR/TV for French on-screen displays.

**SELECT LANGUAGE**  
PUSH VCR CH ▲: ENGLISH  
PULSE VCR CH ▼: ESPAÑOL  
APP. VCR/TV : FRANÇAIS


• If wrong language is set, see the "Reset all VCR Memory Functions" section on page 5.

- You can also set the language using the buttons on the VCR.
- The VCR should be connected to an antenna or cable box (page 6~9).

- ④  Push ▲▼ to select your hookup, and then push ► to set. (Refer to page 12.)  
• If you selected CABLE/ DSS BOX►VCR►TV, continue with step 5.  
If not, go to Alternate Instructions on page 16.

**SELECT HOOKUP**  
CABLE/DSS BOX►VCR►TV  
VCR►CABLE/DSS BOX►TV  
VCR►TV

SELECT: ▲ ▼ KEY  
SET : ► KEY  
END : MENU KEY

- ⑤  Push ▲▼ to select your cable box or DSS receiver output channel number, and then push ► to enter.  
• If necessary, refer to your cable box manual.  
• If both a cable box and DSS receiver are used, set the output channel of the DSS receiver.  
• If you are using Audio/Video jack connections to your cable box, select and set "VIDEO OUT" as the output channel.


**SELECT HOOKUP**  
CABLE/DSS BOX►VCR►TV  
  
CABLE/DSS BOX OUTPUT CH  
CH 01

SELECT: ▲ ▼ KEY  
SET : ► KEY  
END : MENU KEY

## Using ▲▼◀▶ keys

Whenever a menu or program screen is displayed, the PLAY, STOP, REWIND, and FF buttons on the remote control function as ▲▼◀▶ only.

For play, stop, rewind, and fast forward functions, use the buttons on the VCR.

- ⑥  Push ▲▼ to select your cable box or DSS receiver code number, and then push ► to enter. (Refer to the list on page 13.)

**ENTER CODE NUMBER**  
REFERRING TO MANUAL  
  
01

SELECT: ▲ ▼ KEY  
SET : ► KEY  
END : MENU KEY

- If your cable box or DSS receiver doesn't have a remote control, select "NO REMOTE." Then, go to Alternate Instructions on page 16.
- This determines whether the VCR will control your cable box or DSS receiver.

- 7 If you use a cable box, tune it to channel 02.  
If you use a DSS receiver, tune it to channel 270.



Push **▶** to continue.  
• "NOW TRANSMITTING" appears.

If Cable Box

PLEASE TUNE YOUR CABLE BOX TO CH02.

If DSS Receiver

PLEASE TUNE YOUR DSS RECEIVER TO CH 270.

PROCEED: **▶** KEY  
END :MENU KEY

8



Push **▲▼** to select "YES" or "NO," and then push **▶** to enter.

If you use a cable box and selected "YES," go to step 9.

If you use a DSS receiver and selected "YES," go to the Alternate Instructions on page 16.

If you selected "NO," the screen in step 6 on page 14 will reappear. Try entering a different code assigned to your brand and/or repositioning the equipment (see page 13). If the answer is still "NO," cable box or DSS receiver control is not available. Push MENU and go to the Alternate Instructions on page 16.

If Cable Box

IS YOUR CABLE BOX RECEIVING CH 09 ?

YES  
NO

If DSS Receiver

IS YOUR DSS RECEIVER RECEIVING CH 200?

YES  
NO

SELECT: **▲▼** KEY  
SET : **▶** KEY  
END :MENU KEY

Confirm that your cable box is on and that your DSS receiver is off.

9




Push **▲▼** to select your local PBS channel number you receive on your cable box, and then push **▶** to display the "CLOCK AUTO SET" screen.

PLEASE ENTER YOUR LOCAL PBS CHANNEL ON CABLE BOX

CH 01

SELECT: **▲▼** KEY  
SET : **▶** KEY  
END :MENU KEY

 10



Push **CH ▲** to start Auto Clock Set.

 
- If you live near a different time zone, be sure to enter the PBS channel in your time zone.
- "AUTO CLOCK SET PROCEEDING" appears.

CLOCK AUTO SET

CONNECT ANTENNA CABLE AND IF YOU USE A CABLE BOX, TUNE IT TO YOUR LOCAL PBS CH THEN...

PLEASE PUSH CH UP KEY

11



This display appears when auto clock set is completed. Confirm that the time is correct and push **CH ▲** to exit.

7/25/1997 FRI 12:00PM

DST: ON

SETTING : CH02

AUTO CLOCK SET COMPLETED

END : PUSH CH UP KEY

### If the Auto Clock Set displayed time is incorrect...

If you use a cable box and receive more than one PBS station, try auto clock set again. Follow the Set or Reset Auto Clock Set section on page 17 and when the instructions call for you to enter a PBS station, enter the one you have not tried yet.

### If "AUTO CLOCK SET IS INCOMPLETE" appears...

The screen below will appear on-screen if auto clock set data is not available in your area.

AUTO CLOCK SET  
IS INCOMPLETE

PUSH MENU TO SET CLOCK

Push MENU to display the manual clock set screen. (See the Manual Clock Set section on page 16.)

#### Note:

If you use a cable box and receive more than one PBS station, you may exit the manual clock set screen and try auto clock set again. Follow the Set or Reset Auto Clock Set section on page 17 and when the instructions call for you to enter a PBS station, enter the one you have not tried yet.



- Auto clock set will be performed when the VCR is turned off the first time each day. If you use a cable box and you want auto clock set to be performed, the cable box must be left on and tuned to the PBS channel before the VCR power is turned off.

# One Time VCR Setup (continued)

## Alternate Instructions

Complete the following steps if, any of the following applies:

- A** You selected connection type 2 (VCR►CABLE/ DSS BOX►TV or VCR►TV) in step 4 on page 14.
- B** You selected "NO REMOTE" in step 6 on page 14 (your cable box or DSS receiver is not remote controllable).
- C** You use a DSS receiver and selected "YES" in step 8 on page 15.
- D** Cable Box or DSS receiver could not be controlled in step 8 on page 15.

- ① Turn on the cable box and set it to the local PBS channel.

- If you live near a different time zone, make sure to set the channel in your time zone.
- If you use a DSS receiver, it must be turned off.

CHANNEL/CLOCK AUTO SET  
CONNECT ANTENNA CABLE  
AND IF YOU USE A CABLE  
BOX, TUNE IT TO YOUR  
LOCAL PBS CH THEN...  
PLEASE PUSH CH UP KEY

②



Push CH ▲ to start Channel Auto Set and Auto Clock Set.

- The following messages appear.  
"CH AUTO SET PROCEEDING"  
"AUTO CLOCK SET PROCEEDING"

This screen appears to confirm that auto clock set is completed.

③



Confirm that the time is correct and push CH ▲ to exit this screen.

If this screen appears, auto clock set is not available in your area. Please set the clock manually as described at right.


7/25/1997 FRI 12:00PM  
DST:ON  
SETTING : CH02  
AUTO CLOCK SET  
COMPLETED  
END : PUSH CH UP KEY

AUTO CLOCK SET  
IS INCOMPLETE  
PUSH MENU TO SET CLOCK

## If the displayed auto clock set time and D.S.T. are not correct

If you live close to two different time zones, the VCR may recognize the wrong PBS station as the setting channel. If this happens, please complete the following steps.


- 1 Make a note of the SETTING: CH number shown on screen and push CH ▲ to exit.
- 2 Delete the setting channel from channel memory. (See the Add or Delete a Channel section on page 17.)
- 3 Push MENU to display the menu.
- 4 Push ▲▼ to select "SET CLOCK," and then push ► to display the "SET CLOCK" screen.
- 5 Push ▲▼ and ► to select and set "AUTO SET."
- 6 Follow the One Time VCR Setup instructions on pages 14~16.
  - If you use a cable box and have multiple PBS stations, tune the cable box to a different PBS station and try auto clock set again using the menu.

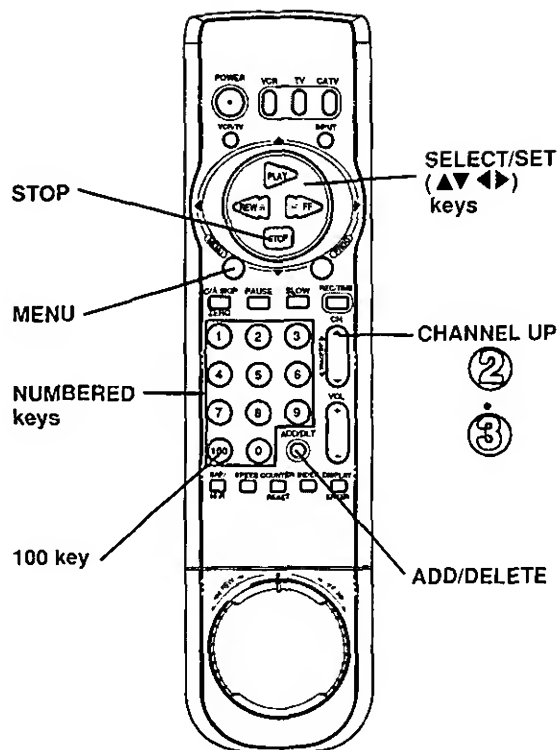

## Manual Clock Set

(In case Auto Clock Set could not be performed)

- 1 Push MENU to display the SET CLOCK screen.

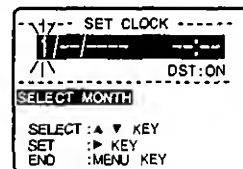

- 2 Push ▲▼ and ◀▶ to select and set the month, date, year, time, and D.S.T. (Daylight Saving Time).

• See page 5 for DST.

**To Make Corrections,** repeatedly push ◀▶ to move the cursor to the incorrect entry and make the correction.

- 3 Push MENU twice to start the clock and exit this mode.





## To Change On Screen Display Language


1 Push MENU to display the menu.

2 Push ▲▼ to select the language.  
English: LANGUAGE  
Spanish: IDIOMA  
French: LANGUE

3 Push ► repeatedly to change the language.

→ English → Spanish → French →

4 Push MENU to exit this mode.

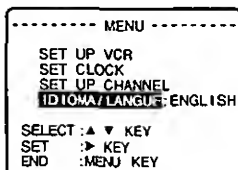


## To Add or Delete a Channel

1 Select a channel using the NUMBERED keys to add or CH ▲/▼ to delete.

2 Push ADD/DLT to add or delete the channel.

- To select a channel once it's deleted, use the NUMBERED keys on the remote control. Deleted channels will flash in the Multi Function Display on the VCR when selected.

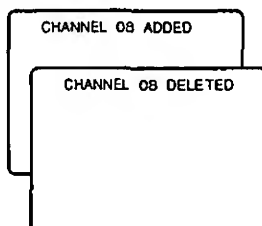

## When Using the 100 key

When selecting CATV channels 100 to 125 with the NUMBERED keys, first push the 100 key and then enter the remaining two digits.

For example, to select channel 125:

Push NUMBERED keys 100, then 2, then 5.

## To Replace Channels in Memory

In case you have cable installed, etc.

1 Push MENU to display the menu.

2 Push ▲▼ to select "SET UP CHANNEL," and then push ► to display the "SET UP CHANNEL" screen.


3 Push ▲▼ to select "ANTENNA SYSTEM," and then push ► to set your antenna system (TV or CATV).

4 Push ▲▼ to select "AUTO SET," and then push ► to display the "CHANNEL/CLOCK AUTO SET" screen.

- To exit this mode, push MENU twice.

5 Follow the One Time VCR Setup instructions on pages 14~16.

- Clock Auto Set will be performed when channels are replaced in memory. To cancel, push STOP when "AUTO CLOCK SET PROCEEDING" appears on-screen.

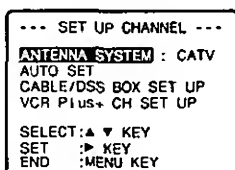

## To Set or Reset the Clock

In case the clock is wrong, or a power failure occurred.


1 Push MENU to display the menu.

2 Push ▲▼ to select "SET CLOCK," and then push ► to display the "SET CLOCK" screen.

3 Push ▲▼ to select "MANUAL SET," and then push ► to display the SET CLOCK screen.

4 Push ▲▼ and ◀▶ to select and set the date, time, and D.S.T. (Daylight Saving Time).

5 Push MENU twice to start the clock and exit this mode.

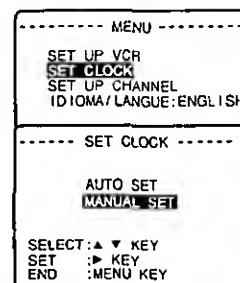

## To Set or Reset Auto Clock Set

Complete the following steps if:


- Auto clock set displayed time was incorrect.
- Auto clock set was not available at first, but has since become available.
- The PBS channel over which clock data is sent was changed by the broadcast company.

1 Push MENU to display the menu.

2 Push ▲▼ to select "SET CLOCK," and then push ► to display the "SET CLOCK" screen.

3 Push ▲▼ and ► to select and set "AUTO SET."

4 Follow the One Time VCR Setup instructions on pages 14~16.

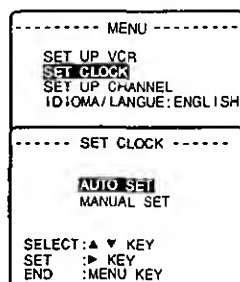

## To setup the VCR in case a cable box or DSS receiver was installed or replaced



1 Push MENU to display the menu.

2 Push ▲▼ to select "SET UP CHANNEL," and then push ► to display the "SET UP CHANNEL" screen.


3 Push ▲▼ to select "CABLE/DSS BOX SET UP," and then push ► to display the "SELECT HOOKUP" screen.

- To exit this mode, push MENU three times.

4 Push ▲▼ and ► to select and set "CABLE/DSS BOX►VCR►TV," and then continue with steps 5~8 on pages 14 and 15.

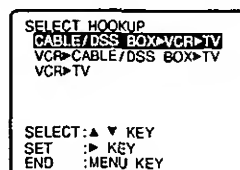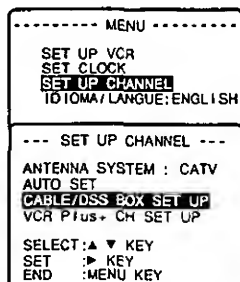

 
- This VCR will accurately maintain its calendar up to Dec. 31, 2015, 11:59PM.
- Normal TV or Cable channels are automatically selected and placed in memory depending on how your VCR is hooked up.
- If you change your cable box or DSS receiver, please perform the "To Set or Reset Auto Clock Set" section above.



# On-Screen Displays (OSD)

## Function & Channel Display


When a function button is pushed, e.g. PLAY, or you change channels, a 4 second display appears first in large and then small characters. (Some station names may also appear.)

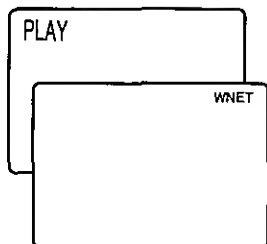

## Menu Screen

1 Push MENU to display the menu.

2 Push ▲▼ and ► to make your selection.

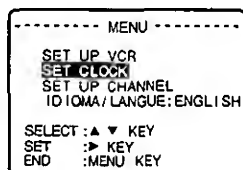


- To get the most from each feature, please read the Operating Manual before attempting any operation.

## VCR Status & Clock Display



Push DISPLAY to display or remove the overlay shown below.

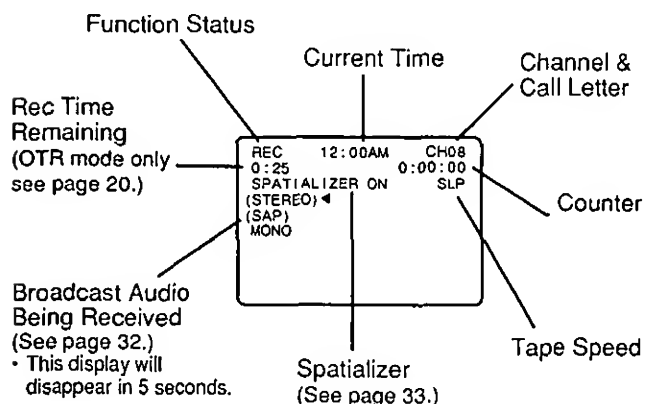

## Blank Tape/ No Video Signal Indication

When a blank section of tape comes up in Play mode, or the selected channel has no broadcast signal, the TV screen will turn solid blue.

## Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.

If no active channels are found for CHANNEL MEMORY... (See page 16.)

NO CH FOUND  
PLEASE CHECK ANTENNA  
CABLE CONNECTION THEN  
PUSH VCR CH UP KEY AGAIN

If you attempt to set or review a Timer Recording and the Clock is not set... (See page 22.)

PLEASE SET CLOCK  
BEFORE PROGRAMMING

After a Timer Program has been set... (See page 22.)

TURN VCR OFF  
FOR TIMER RECORDING

If you push REC on the remote control or VCR, and a cassette is inserted with no record tab... (See page 20.)

CHECK CASSETTE  
RECORD TAB

If you push PLAY, FF, REW, or REC on the remote control or VCR without a cassette inserted... (See pages 19, 20.)

NO CASSETTE  
PLEASE INSERT A CASSETTE

If you push POWER or STOP during a Timer Recording... (visible in VCR mode only) (See page 23.)

TO CANCEL TIMER REC  
PUSH POWER THEN STOP KEY

If head cleaning becomes necessary while playing back a tape... (See page 5.)

VIDEO HEADS MAY  
NEED CLEANING  
PLEASE INSERT HEAD  
CLEANING CASSETTE  
OR REFER TO MANUAL

END:PLAY KEY

If you push a function button other than STOP or POWER while the VCR is in VCR Lock mode... (See page 31.)

VCR LOCK ACTIVATED





# Playback a Tape




## Check list before you begin.

- ☐ All connections are made.  
(See pages 6~9.)
- ☐ TV and VCR are plugged in.
- ☐ TV is turned on and set to the VCR channel (CH 3 or 4).

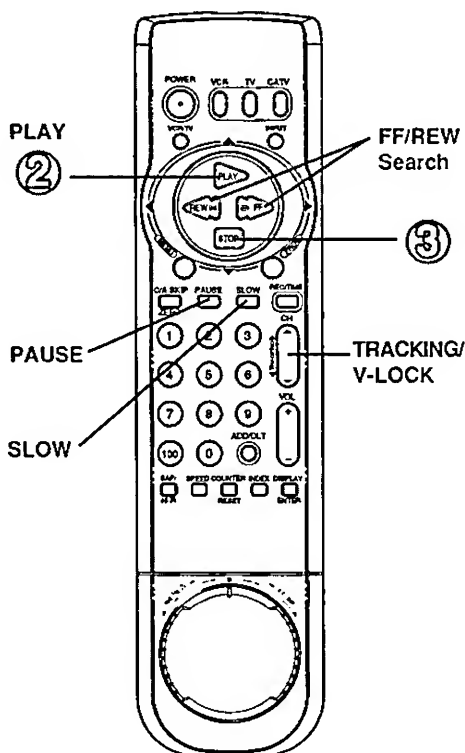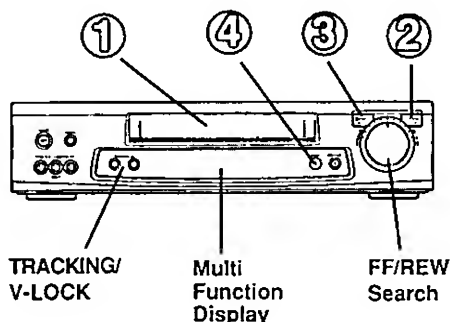


### Caution:

Please inspect your cassette tapes and remove any loose or peeling labels to prevent them from becoming jammed in your unit.

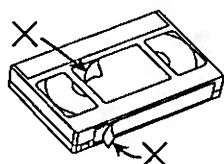


①

 

Insert a cassette.

- VCR power comes on automatically.

 This indicator lights in the Multi Function Display.



②



Push **PLAY** on the remote or VCR to start playback.

- Playback begins automatically if cassette has no record tab.

③



Push **STOP** on the remote or VCR to stop playback.

④



Push **EJECT** on the VCR to eject the cassette.

- You may eject a cassette with power on or off.

## To Find a Particular Scene During Playback

Push **REW** or **FF** during playback to search for a scene.



or



- Search speed for SP mode tapes is 9 times and SLP mode tapes is 27 times the normal speed.
- Some noise bars will appear during search.

## Special Effects During Playback

These features work best in SP or SLP mode. The sound will be muted.

### Slow Motion Playback

Push **SLOW** to start slow motion playback. Push **PLAY** or **SLOW** to release.

### Still (Freeze) Frame Picture

Push **PAUSE** to freeze and release the picture.

- To reduce picture noise, first push **SLOW**. Then, use **CH** (**TRACKING**)  $\Delta/\nabla$  to clear up the picture, then push **PAUSE**.

### Frame by Frame Advance

In Still mode, hold down **SLOW** to advance the still picture one frame at a time. Push **PAUSE** to release.

## Features for a Quality Picture

### Digital Auto Picture

This feature automatically controls the video output signal for less noise depending on the tape condition.

### Digital Auto Tracking

This feature continuously analyzes the signal and adjusts for optimum picture quality.

### Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise. Push **CH** (**TRACKING**)  $\Delta/\nabla$  during playback until the picture clears up. To return to Auto Tracking mode, push **POWER** off and then on again.

### V-Lock Control (to reduce picture jitter)

In Still mode, **CH** (**TRACKING**)  $\Delta/\nabla$  operate as a V-Lock control. Push  $\Delta/\nabla$  until the picture is stabilized.

### DynAmorphous™ Metal Head/

### CNR (Color Noise Reduction)/ ANR (Advanced Noise Reduction)

DynAmorphous™ Metal Head increases playback and record picture quality. Color Noise Reduction reduces the color noise. Advanced Noise Reduction reduces the luminance noise.





- After the VCR is in Still or Slow mode for 3 minutes, it will switch to the Stop mode automatically to protect the tape and the video head.

# Record On a Tape



## Check list before you begin.


- ☐ All connections are made.  
(See pages 6~9.)
- ☐ VCR is Plugged in.
- ☐ TV is turned on and set to the VCR channel (CH3 or CH4).

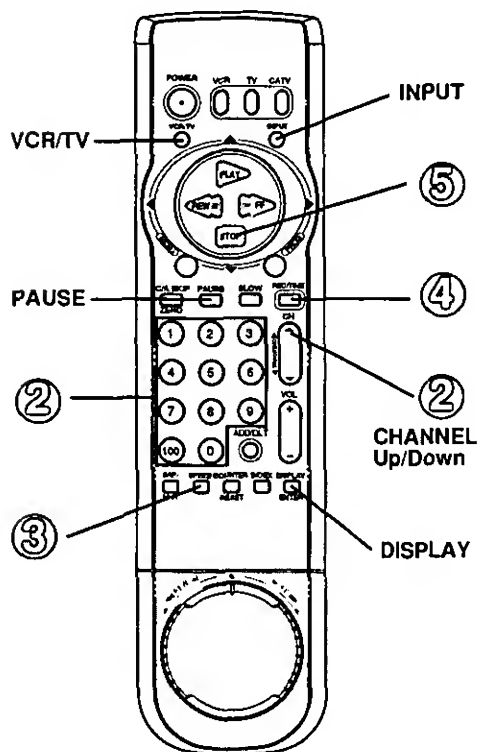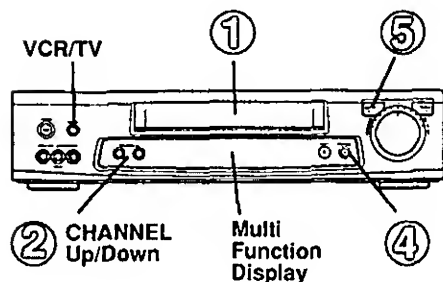

①

Insert a cassette with record tab.

- VCR power comes on automatically.

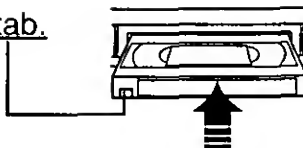


②



Push CH ▲/▼ or **NUMBERED** keys to select a channel.

- Or, push CHANNEL ▲/▼ on the VCR.
- Holding down CH ▲/▼ will increase the channel search speed.
- To record from an outside source, push CH ▲/▼ or INPUT to select "LINE1" or "LINE2" (see page 21).

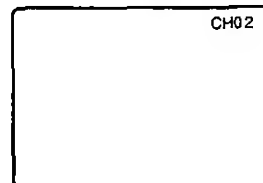

③



Push **SPEED** to change the recording speed.

- SP = Standard Play
- LP = Long Play
- SLP = Super Long Play  
(See page 5.)



④




Push **REC/TIME** on the remote control or VCR to start recording.

- To edit out unwanted portions, push PAUSE to pause the recording in progress. To release, push PAUSE again.  
(After the VCR has been in Pause mode for 5 minutes, it will stop automatically to protect the tape and video head.)

### One Touch Timer Recording (OTR)

 The VCR starts recording and turns itself off at a preset time. In step 4, push REC/TIME repeatedly to set the length of the recording. Each push will change the stop time as shown.



- "TIMER" lights in the Multi Function Display.
- The remaining recording time can be displayed by pushing DISPLAY in OTR mode.

⑤



Push **STOP** on the remote control or VCR to stop recording.

## Record One Program While Watching Another

- 1 Push VCR/TV while recording is in progress to turn off the VCR indicator in the Multi Function Display.
- 2 Use the TV channel controls to select a program. The VCR will continue to record your program while you watch any channel you choose.
  - To switch back and forth between the recording and viewing channel, push VCR/TV.

## Selecting Channels at the VCR


- 1 Turn your TV and VCR on.
  - VCR Indicator lights on the Multi Function Display. If indicator doesn't light, push VCR/TV to turn it on.
- 2 Use CH ▲/▼ on the remote control or VCR to select channels.
  - To switch back to TV channel selection, push VCR/TV to turn VCR indicator off, or simply turn the VCR power off.




# Copying Your Tapes (Dubbing)

## Connections you'll need to make. (Choose front or rear connection.)


- When connecting to a normal VCR, use the L Audio In Jack for proper sound reduction.

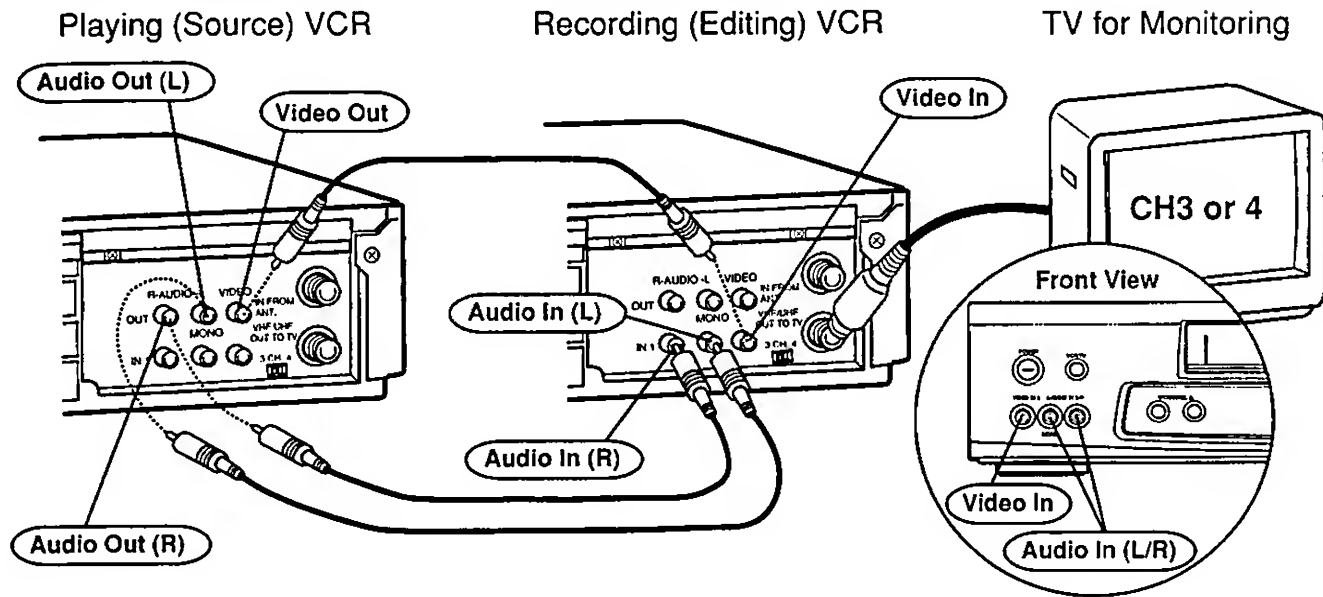

- 1 Insert a pre-recorded tape into the Playing (Source) VCR.

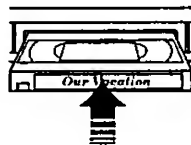

- 2 Insert a blank tape with record tab into the Recording (Editing) VCR.

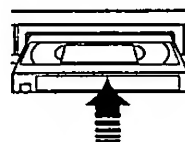

- 3 Select "LINE" Input mode on the Recording (Editing) VCR. (See "Selecting the Input Mode" at right.)

- 4 Push PLAY on the Playing VCR. Push PAUSE at the desired starting point.

- 5 Push REC on the Recording VCR, and then push PAUSE immediately thereafter.

- 6 Push PAUSE on both VCRs at the same time, to begin copying.

### To Edit Out Unwanted Parts


Push PAUSE on the recording VCR while copying is in progress. Push PAUSE again to resume copying.

- 7 Push STOP on both VCRs to stop copying.


## To Monitor Dubbing on Your TV

- 1 Turn your TV on and tune to the Recording VCR channel (CH3 or CH4).
- 2 Set the VCR/TV Selector on the Recording VCR to "VCR."


## Selecting the Input Mode

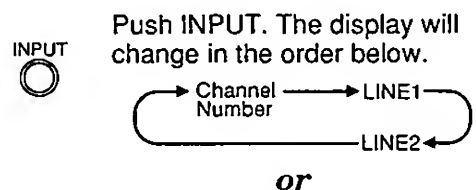

or

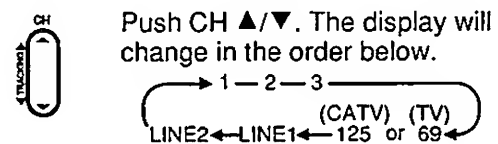

 - LINE1: For rear audio/video connection.
- LINE2: For front audio/video connection.



- When LINE is selected, "L1" or "L2" is displayed in the Multi Function Display for about 4 seconds.

### Caution:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.



# Timer Recording

You can set up the VCR to record a one time, daily, or weekly program while you are away or otherwise occupied. Up to 8 programs can be stored in memory.




## Check list before you begin.

- ☐ All connections are made. (See pages 6~9.)
- ☐ TV and VCR are plugged in and turned on.
- ☐ VCR/TV selector is set to "VCR."
- ☐ Clock is set to correct time.
- ☐ Record tab in place. (See page 5.)



⑦

Multi Function Display

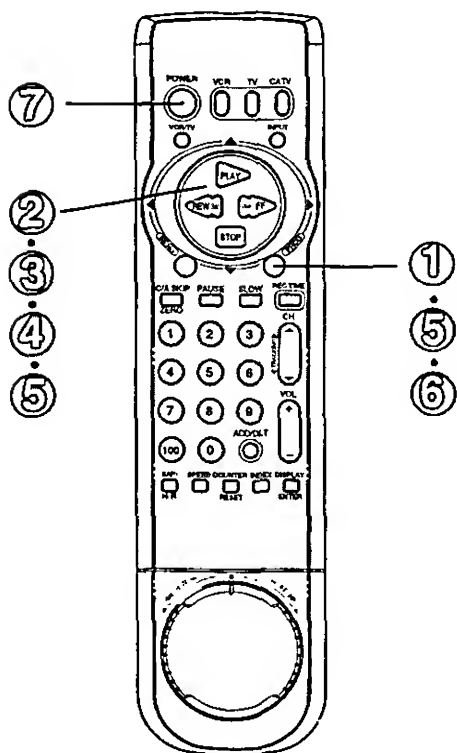


## Important notes when using a DSS receiver


- When recording programs via a DSS receiver, the DSS receiver must be left on.
- When recording programs via an antenna or cable, the DSS receiver must be turned off.




Push PROG to display the "SET PROGRAM" screen.

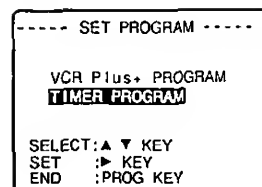

Push ▲▼ to select "TIMER PROGRAM," and then push ► to display the program screen.

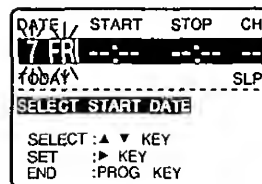


 
- If a program is already in memory, push ▲▼ and ► to select an unused program number.



Push ▲▼ and ► to select and set one of the following:

- 1~31 = One time recording
- DAILY = Same time MON~FRI
- WEEKLY = Same time once a week

### Example

 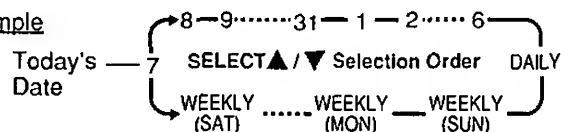

Push ▲▼ and ◀▶ to select and set each of the remaining items at right.

### Remaining Items to be set:


- START time
- STOP time
- CH(annel) number, or LINE for outside source recording
- Speed (SP, LP, SLP)

To Make Corrections, repeatedly push ► to move the cursor to the right, or ◀ to move to the left to the incorrect entry and make the correction.



Push PROG to end the program.

- This screen appears for confirmation.

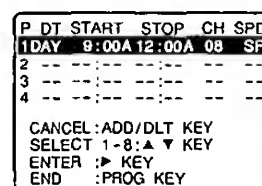


If you use a DSS receiver and enter a channel number of 100~125, the screen at right appears.



Push ▲▼ to select "DSS" or "CABLE," and then push ► to enter.

- The confirmation screen appears above right after this selection.

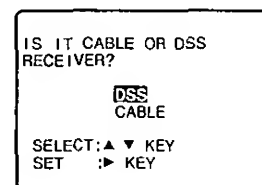

## To Enter More Programs

Push ▲▼ and ► to select and set a blank program number, and then repeat steps 3 and 4.



Push PROG to exit this mode and return to the normal screen.



Push POWER off to set the timer.

- When recording programs via a cable box, make sure the cable box is left on. If the cable box cannot be controlled with the VCR, you must manually select the desired channel.


Multi Function Display



## Cancel a Timer Recording: (Recording is in progress)

Push POWER and then STOP within 10 seconds to cancel the timer recording.

- The TIMER indicator goes out in the Multi Function Display.

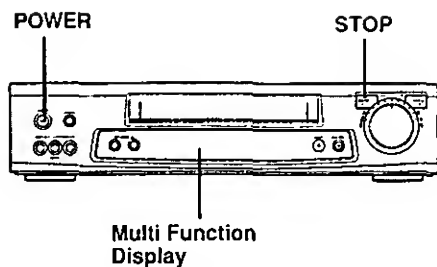

## Replace Program Contents: (Recording is not in progress)

- 1 Push PROG to display the "SET PROGRAM" screen.
- 2 Push ▲▼ to select "TIMER PROGRAM," and then push ► to display all currently set programs.
- 3 Push ▲▼ and ► to select and set a program number. (See page 22.)
- 4 Push ▲▼ and ◀▶ to select and set replacement timer information.
- 5 Push PROG twice to exit this mode.

----- SET PROGRAM -----

VCR Plus+ PROGRAM  
TIMER PROGRAM

P	DT	START	STOP	CH	SPD
1	--	--	--	--	--
2	8	10:00P	12:00P	125	SLP
3	10	8:00P	9:00P	10	SP
4	SU	9:00P	10:00P	L	SLP

SELECT 1-8: ▲ ▼ KEY  
ENTER: ► KEY  
END: :PROG KEY

DATE START STOP CH

8 SAT 10:00P 12:00P 125

SLP

SELECT START DATE

SELECT: ▲ ▼ KEY  
SET: ◀ ▶ KEY  
END: :PROG KEY

## Review or Clear Program Contents: (Recording is not in progress)

- 1 Push PROG to display the "SET PROGRAM" screen.
- 2 Push ▲▼ to select "TIMER PROGRAM," and then push ► to display all currently set programs.
- 3 Push ▲▼ to select a program number.
- 4 Push ADD/DLT to clear the program.
- 5 Push PROG to exit this mode.

----- SET PROGRAM -----

VCR Plus+ PROGRAM  
TIMER PROGRAM

P	DT	START	STOP	CH	SPD
1	DAY	9:00A	12:00A	08	SP
2	8	10:00P	12:00P	125	SLP
3	10	8:00P	9:00P	10	SP
4	SU	9:00P	10:00P	L	SLP

CANCEL: ADD/DLT KEY  
SELECT 1-8: ▲ ▼ KEY  
ENTER: ► KEY  
END: :PROG KEY

P DT START STOP CH SPD


1 -- -- -- -- --

2 8 10:00P 12:00P 125 SLP

3 10 8:00P 9:00P 10 SP

4 SU 9:00P 10:00P L SLP

SELECT 1-8: ▲ ▼ KEY  
ENTER: ► KEY  
END: :PROG KEY

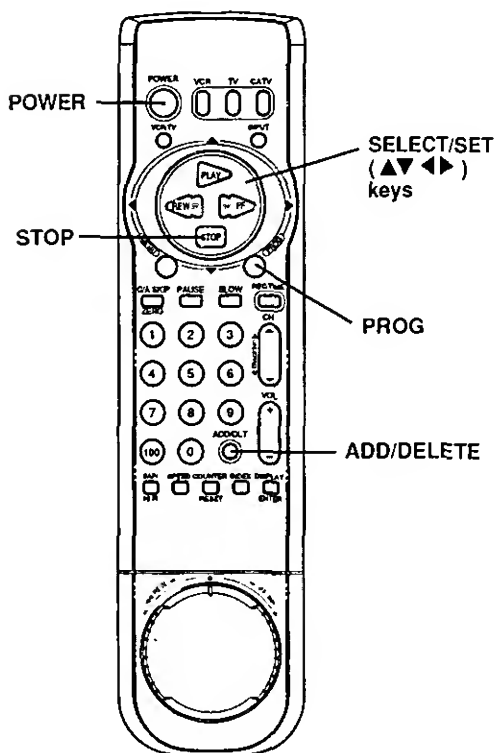

- A cassette with no record tab is ejected and TIMER indicator flashes when the power is turned off to set the timer.
- If the start times of two programs overlap, the overlapping programs will flash on the screen. The lower numbered program will have priority.
- If the start time for a timer recording comes up during a normal recording or One Touch Recording (page 20), the timer recording will not be performed.
- If there is a power interruption of more than one minute, the recording will not be performed or continue.



# Tape Operation


## COMMERCIAL ADVANCE™

COMMERCIAL ADVANCE™ detects and marks the beginning and end points of commercials on your tape for recordings over 15 minutes in length. When the COMMERCIAL ADVANCE™ marked tape is played back, the VCR automatically advances through the commercial segments at high speed. You can also set this feature to Manual so as to have more control over the advance process.

The effectiveness of this system can vary due to differences in the way television stations broadcast. See page 27 for answers to the most commonly asked questions about this feature.

### ☒ Check list before you begin


- ☐ All connections have been made and the One Time Setup is completed.
- ☐ Your TV and VCR are plugged in and turned on.
- ☐ TV is tuned to the VCR channel (CH 3 or 4).

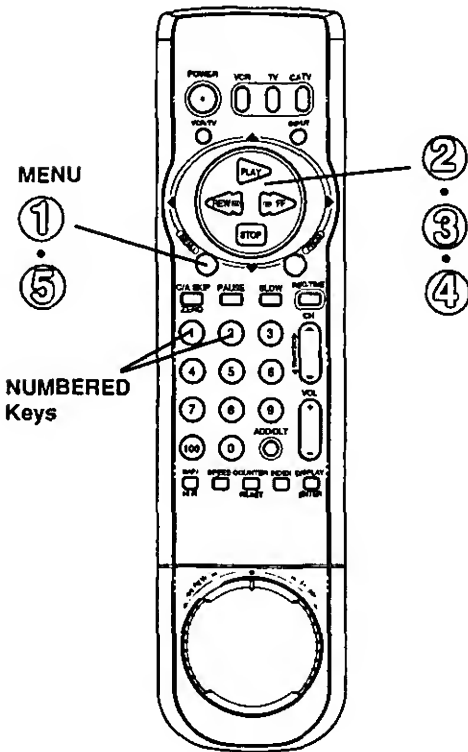


## COMMERCIAL ADVANCE™ Marking

When the COMMERCIAL ADVANCE RECORD setting is ON, the VCR automatically rewinds the tape after a recording has been made and marks the beginning and end of any detected commercial blocks. After marking is done, the tape is returned to the end of the recording. Commercials are not erased from the tape.

① Push MENU to display the menu screen.

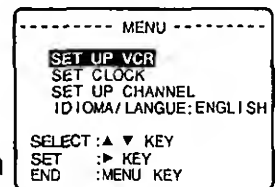


② Push ▲▼ to select "SET UP VCR," and then push ► to display the "SET UP VCR" screen.

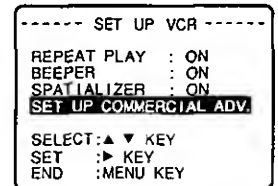


③ Push ▲▼ to select "SET UP COMMERCIAL ADV.," and then push ► to display the "SET UP COMMERCIAL ADV." screen.

④ Push ▲▼ to select "C/A RECORD," and then push ► to set "ON" or "OFF."

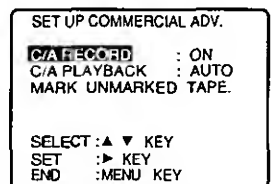

**ON** Timer recordings, VCR Plus+ recordings, and One Touch Recordings are marked automatically.


The screen at right appears when STOP is pushed during a normal recording. Select one of the following:  
Push the 1 NUMBERED key to mark the recording now. The screen below right will appear.

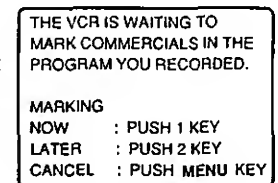

Push the 2 NUMBERED key, to mark the recording later, after the power has been turned off.

• If the tape is rewound and another recording started before the power is turned off, the commercials may not be marked correctly.

Push MENU to cancel the marking of this recording.

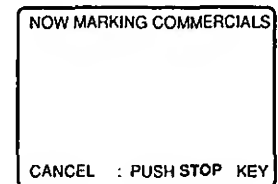

**OFF** The VCR will not mark commercials. Off should be selected when you are editing or dubbing a tape, or when you simply do not wish to use this feature.


⑤ Push MENU three times to return to the normal screen.

COMMERCIAL ADVANCE™ is a trademark of Arthur D. Little Enterprises. A Jerry Iggulden invention licensed by Arthur D. Little Enterprises.




## Marking an Unmarked Tape

This feature allows you to turn your existing unmarked tapes into Commercial Advance tapes. The VCR will scan the previously recorded tape for commercial segments, and then mark it.

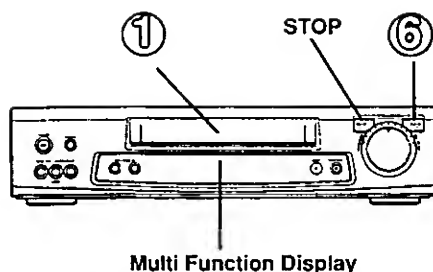


- ① Insert the pre-recorded tape with record tab.

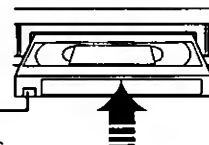


- Recorded segments must be at least 15 minutes in length or marking cannot be performed.
- If necessary, push REW or FF to place the tape at the start point of a recorded segment of over 15 minutes for commercial marking.


- ② Push MENU to display the menu screen.

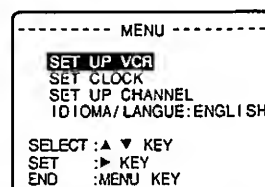


- ③ Push ▲▼ to select "SET UP VCR," and then push ► to display the "SET UP VCR" screen.

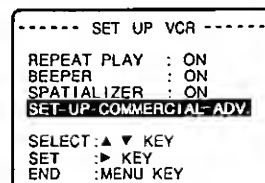

- ④ Push ▲▼ to select "SET UP COMMERCIAL ADV.," and then push ► to display the "SET UP COMMERCIAL ADV." screen.

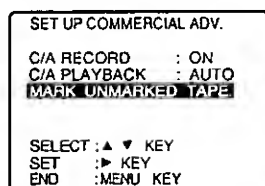


- ⑤ Push ▲▼ to select "MARK UNMARKED TAPE," and then push ► to display the screen at right.

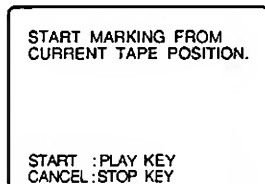

- ⑥ Push PLAY to start commercial marking.



- "CA" will appear on the Multi Function Display.

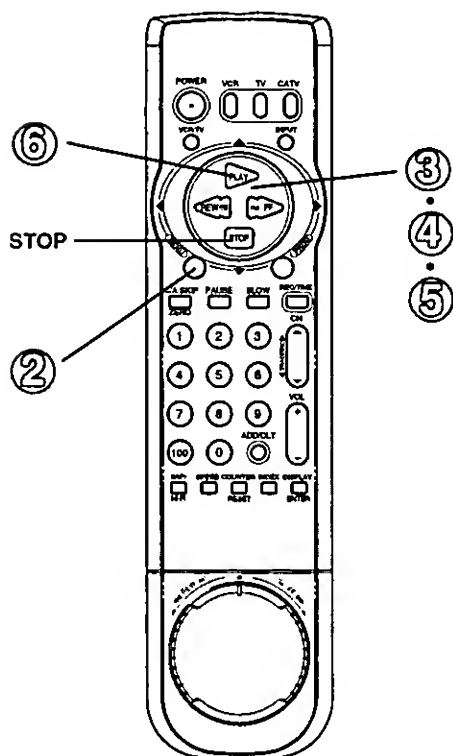

### NOTE:

If 15 minutes after marking is started an already marked portion of tape is encountered, a message will appear to alert you. Push STOP to mark the marked portion of tape. If within 15 minutes after marking has begun, an already marked portion of tape is encountered, a message will appear to alert you. Push STOP to remove the message.





- The selection made in step 4 remains set unless there is a power outage in which case the original factory setting will be restored.
- If the time interval between scheduled timer recordings is insufficient for marking, the VCR will wait until all recordings are finished before marking them.
- The VCR can store up to 4 programs or 40 commercial blocks in memory at one time. As marking is performed, memory storage space is replenished. However, if storage capacity is exceeded, the remaining commercials will not be marked.
- The VCR will playback the tape at normal speed. Then, the tape is rewound and marking will be performed.

## COMMERCIAL ADVANCE™

### ✓ Check list before you begin


- ☐ All connections have been made and the One Time Setup is completed.
- ☐ Your TV and VCR are plugged in and turned on.
- ☐ TV is tuned to the VCR channel (CH 3 or 4).

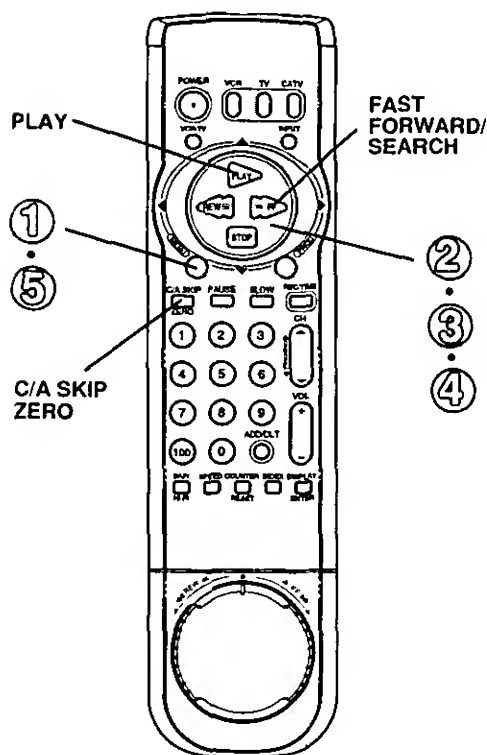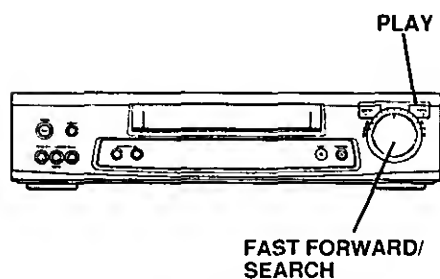


## COMMERCIAL ADVANCE™ Playback

When playing back recordings which have been marked using the COMMERCIAL ADVANCE™ feature, you can either set the VCR to automatically advance through marked commercial blocks, or set it so that commercials are only skipped on your command.

- ① Push MENU to display the menu screen.

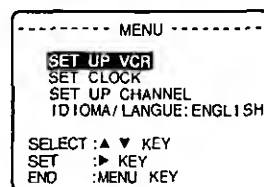


- ② Push ▲▼ to select "SET UP VCR," and then push ► to display the "SET UP VCR" screen.

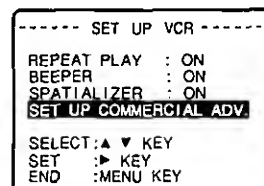

- ③ Push ▲▼ to select "SET UP COMMERCIAL ADV.," and then push ► to display the "SET UP COMMERCIAL ADV." screen.

- ④ Push ▲▼ to select "C/A PLAYBACK," and then push ► to set "AUTO" or "MANU(al)."

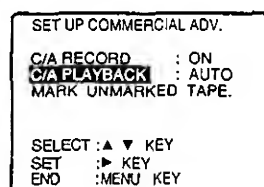

**AUTO** The VCR will automatically advance through marked commercial blocks recorded on the tape and then resume playback.

**MANU(al)** The VCR will advance through commercials only when C/A SKIP ZERO is pushed. Playback will resume when the end mark of a commercial block is found, or a new recording or blank portion is detected, or after eight minutes.

- ⑤ Push MENU three times to return to the normal screen.

### NOTES

- The selection made in step 4 remains set unless there is a power outage in which case the original factory setting will be restored.
- A commercial may not be skipped if playback is started in the middle of a commercial, only a single isolated commercial is shown, or an individual commercial is longer than one minute. Push FAST FORWARD/ SEARCH to quickly advance through the commercial.
- Part of a recorded program may be skipped over if the program portion between commercials is less than one minute, or there are frequent dark and quiet scenes. Rewind the tape to the beginning of the skipped portion and push PLAY.

The most commonly asked questions about COMMERCIAL ADVANCE™ are answered below.

Question	Answer
How fast does the VCR advance through commercials?	The VCR advances through a 3-minute commercial block in about 8 to 12 seconds if the tape speed is SLP. In SP, it takes about 25 to 35 seconds.
Are commercials advanced through only when I playback a recording?	Yes. The commercials are not marked until after the recording is finished.
Are commercials still recorded on the tape in case I choose to view them sometime?	Yes. By setting the C/A PLAYBACK to MANU(al), see page 26, you can view or advance through commercials as desired.
Does COMMERCIAL ADVANCE™ work in all recording speeds?	Yes. COMMERCIAL ADVANCE™ works in SP, LP, and SLP.
Does the VCR advance through commercials each time I playback tapes which were recorded using COMMERCIAL ADVANCE™ ?	Yes. As long as C/A PLAYBACK is set to AUTO, see page 26, the VCR should advance through commercials each time the tape is played back.
After marking commercials, does the VCR stop at the end of the tape, or rewind to the beginning?	The tape stops at the end of the recording so that any additional timer recordings can be performed.
Can I play my COMMERCIAL ADVANCE™ recordings in non-COMMERCIAL ADVANCE™ VCRs?	Yes. COMMERCIAL ADVANCE™ marked recordings will play in non-COMMERCIAL ADVANCE™ VCRs, but commercials will not be advanced through.
Does the marking process interfere with other programmed recordings?	No. If the interval between 2 or more timer programs is not sufficient to mark the recording, marking will be done after all recordings are complete and the power goes off.
What happens if I cancel the marking in progress so I can use the VCR?	Marking will be resumed when the VCR's power is turned off as long as the tape has not been ejected.
What if part of my program is advanced through along with the commercials?	Rewind the tape to where the program should have started, and push PLAY to view the program.
Can I mark a recording that was made on another VCR?	Yes. See "Marking an Unmarked Tape" on page 25.
<b>Additional Notes:</b> <ul style="list-style-type: none"> <li>• Because of the various ways in which commercials are broadcast, the VCR may not be able to recognize all commercials.</li> <li>• If a timer recording is scheduled for the middle of the night, please be aware that the VCR will make some noise as it rewinds and fast forwards the tape while marking commercials.</li> </ul>	

COMMERCIAL ADVANCE™ is a trademark of Arthur D. Little Enterprises.  
A Jerry Iggulden invention licensed by Arthur D. Little Enterprises.

# Tape Operation (continued)

Your VCR is equipped with several time saving features as well as convenient automatic functions making tape operation easier than ever.

## Repeat Play

The VCR will play your recording over and over.

①



Push MENU to display the menu.

```

----- MENU -----
SET UP VCR
SET CLOCK
SET UP CHANNEL
ID10MA/LANGUE: ENGLISH

SELECT: ▲ ▼ KEY
SET   : ► ◄ KEY
END   : MENU KEY
    
```

②



Push ▲▼ to select "SET UP VCR," and then push ► to display the "SET UP VCR" screen.

③



Push ▲▼ to select "REPEAT PLAY," and then push ► to select "ON" or "OFF."

```

----- SET UP VCR -----
REPEAT PLAY : ON
BEEPER      : ON
SPATIALIZER : ON
SET UP COMMERCIAL ADV.


SELECT: ▲ ▼ KEY
SET   : ► ◄ KEY
END   : MENU KEY
    
```

- The VCR plays back the tape to its end or until a blank portion of over 30 seconds is detected (erased portions are not considered blank). The tape is then rewound and played again and again until Repeat Play is turned off.

④



Push MENU twice to return to the normal screen.

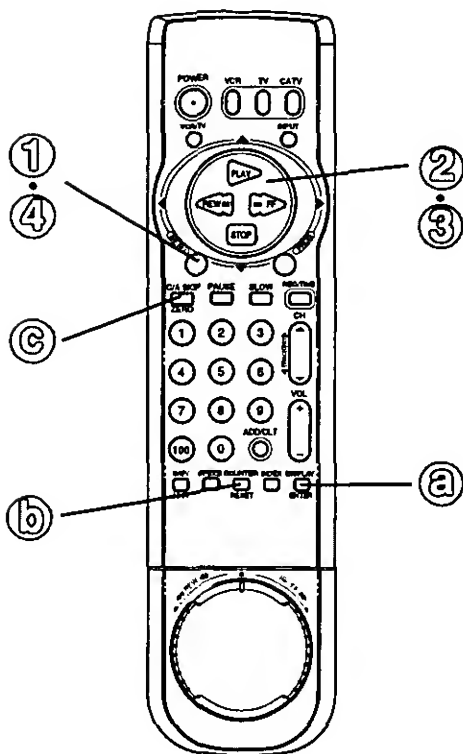

## Zero Search

To quickly return to a specific tape location.

a



Push DISPLAY to display the Time Counter overlay.

```

STOP 12:00AM CH08
      0:00:30
SPATIALIZER ON SLP
(STEREO)
(SAP)
MONO ◄
    
```

b



Push COUNTER RESET to reset the Time Counter to "0:00:00."

- This may be done at as many places as you wish on the tape.

```

STOP 12:00AM CH08
      0:00:00
SPATIALIZER ON SLP
(STEREO)
(SAP)
MONO ◄
    
```

c




Push C/A SKIP ZERO in Stop mode.

- The VCR will go into FF or REW mode and stop at the last point the Time Counter was set to 0:00:00.

## Shuttle Variable Speed Search

The SHUTTLE Ring allows you to smoothly control the tape speed during special effects playback in both forward or reverse.

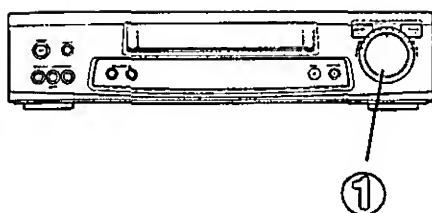

1



Turn SHUTTLE Ring on the remote control or VCR while in Play or Still mode to place the forward or reverse search.

- The more you turn the Ring, the faster the search speed will be.

2


Push a function button such as: PLAY, STOP, etc. on the VCR or remote control to release the Shuttle mode.

- The VCR performs the function of the button pushed.



NOTES

- When the SHUTTLE Ring is turned more than half in Stop mode, normal Fast Forward or Rewind will begin.
- Some noise bars are normal during Shuttle operation.
- After 3 minutes in Still or Slow, the VCR will go into Stop mode.
- When the SHUTTLE Ring is released, the VCR goes into Still mode.

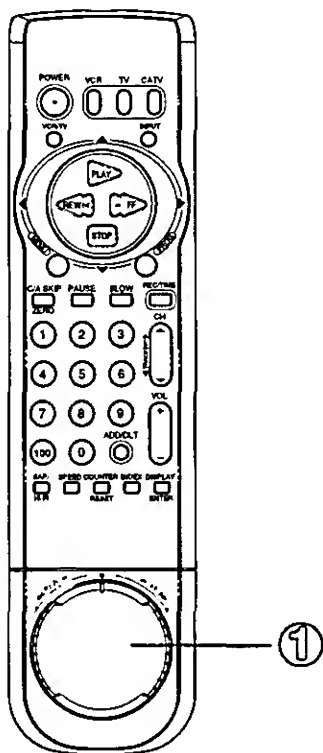

### Auto Operation Functions

#### Auto Playback

When a tape is inserted, the power turns on (Auto). If the record tab\* is removed, playback begins (Auto).

#### Auto Rewind

When a tape reaches its end during playback, fast forward or manual record, the VCR will rewind and go into Stop mode.

#### Playback Auto Eject (Repeat Play is "OFF.")

When a tape without a record tab\* is played to its end, the VCR will rewind and then eject the tape.

#### Memory Rewind Off



When the POWER button is pushed during rewind, the VCR will turn off after rewind is complete.

\* For record tab information, see page 5.

# Tape Operation (continued)

## VHS Index Search System

Each time you start a recording, an invisible index mark is automatically placed on the tape. You can then use these index marks to access or scan your recordings.

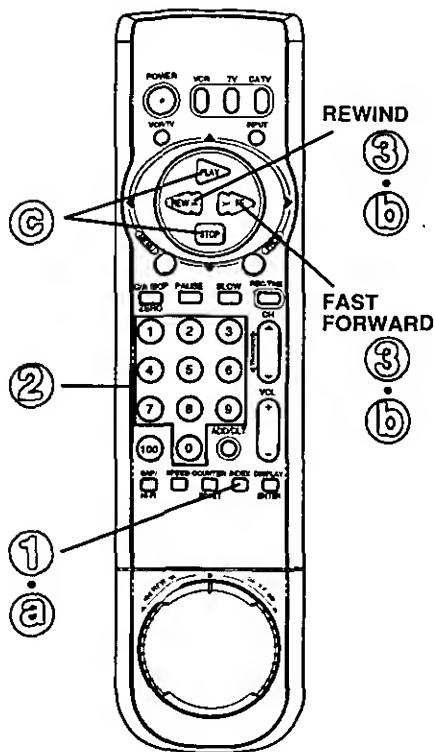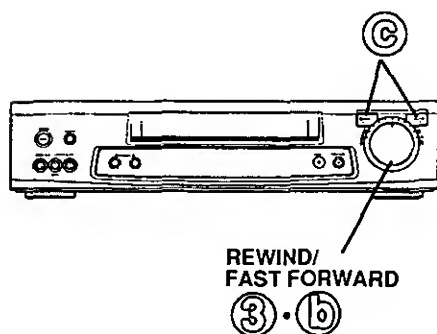


### Direct Access

This feature allows you to go directly to the recording you want from anywhere on the tape by entering a specific index number.

① INDEX Push INDEX in Playback or Stop mode.

② Push a NUMBERED keys to select the desired recording.  
• To calculate the number, see below.

③ REW or FF Push REW or FF to start the Index Search forward or backward.  
• When the designated location is reached, the VCR goes into Playback mode.

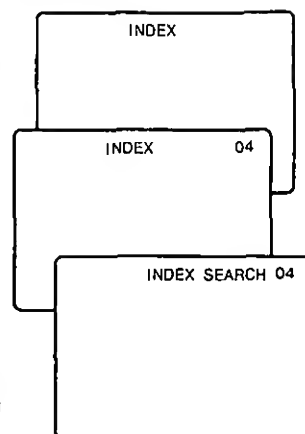


### To calculate an Index Number

Count forward or backward each recording start point, including the recording you want to see, from wherever you are on the tape.


#### Example 1:

 If you are watching recording 4 and you want to watch recording 2, count the start points to number 2. Recordings equal 3. Enter 3 in step "2" and push REW.



#### Example 2:

 If you are watching recording 2 and you want to watch recording 6, count the start points to number 6. Recordings equal 4. Enter 4 in step "2" and push FF.



NOTE: ↓ indicates start points of each recording.


### Index Scan

This feature allows you to scan (forward or reverse) each recording for 10 seconds in Playback mode.

a INDEX Push INDEX in Playback or Stop mode.


b REW or FF Push REW or FF to begin the scan.  
• As each index mark is reached, a short playback will be performed after which FF or REW resumes.

c PLAY Push PLAY to cancel the scan and begin playback.  
• You may also push STOP to stop the tape.

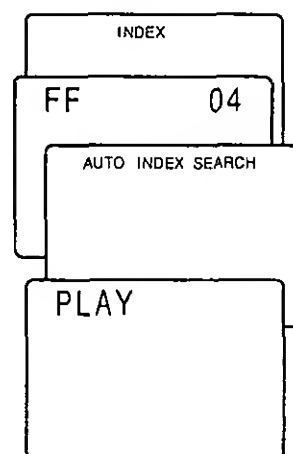

- Make each entry within 10 seconds, or the Index Search mode will be canceled.
- Index marks will be placed for Timer recordings as well.

- If the Direct Access index search is initiated extremely close to an index mark, there is a possibility that the index mark will not be counted in the search.

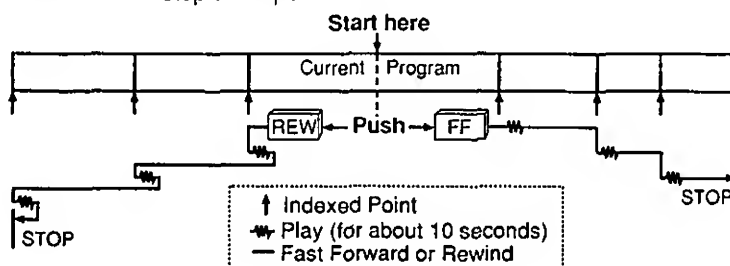



# Special VCR Features



## Check list before you begin.

- ☐ All connections are made.  
(See pages 6~9.)
- ☐ VCR is Plugged in.
- ☐ TV is turned on and set to the VCR channel (CH3 or CH4).

## VCR Lock Feature

When activated, this feature prohibits all operations except for timer recording and tape eject. This feature is used to keep children from operating the VCR.



Hold down STOP on the VCR for 7 seconds while in Stop or Power OFF mode.

VCR LOCK ACTIVATED


### To Cancel the VCR Lock feature,



hold down STOP on the VCR for 7 seconds again while in Stop or Power OFF mode.

VCR LOCK OFF

- VCR Lock mode is cancelled automatically after 24 hours as long as the clock is set.

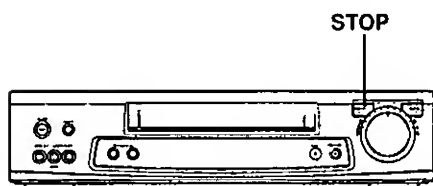


## Warning Beeper Feature

When you select BEEPER ON, a short warning will sound each time an invalid entry or incomplete operation is made.

①



Push MENU to display the menu.

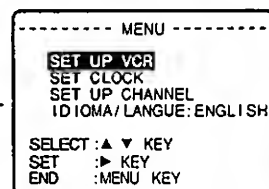

②




Push ▲▼ to select "SET UP VCR," and then push ► to display the "SET UP VCR" screen.

③




Push ▲▼ to select "BEEPER," and then push ► to select "ON" or "OFF."

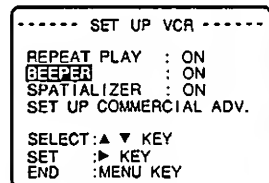


④



 Push MENU twice to exit this screen.

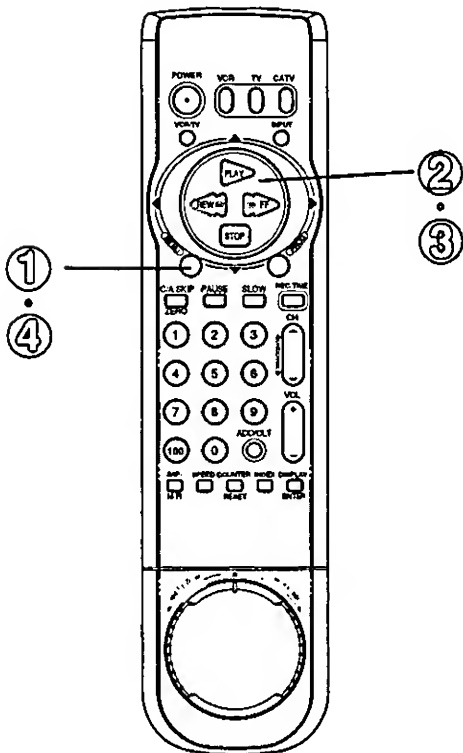




# MTS Broadcast/ VHS Hi-Fi Stereo System




## Check list before you begin

- ☐ The VCR is connected to a stereo TV, or a mono TV and an external stereo amp or receiver with speakers.
- ☐ The VCR and other components are plugged in and turned on.


## Connections to Make

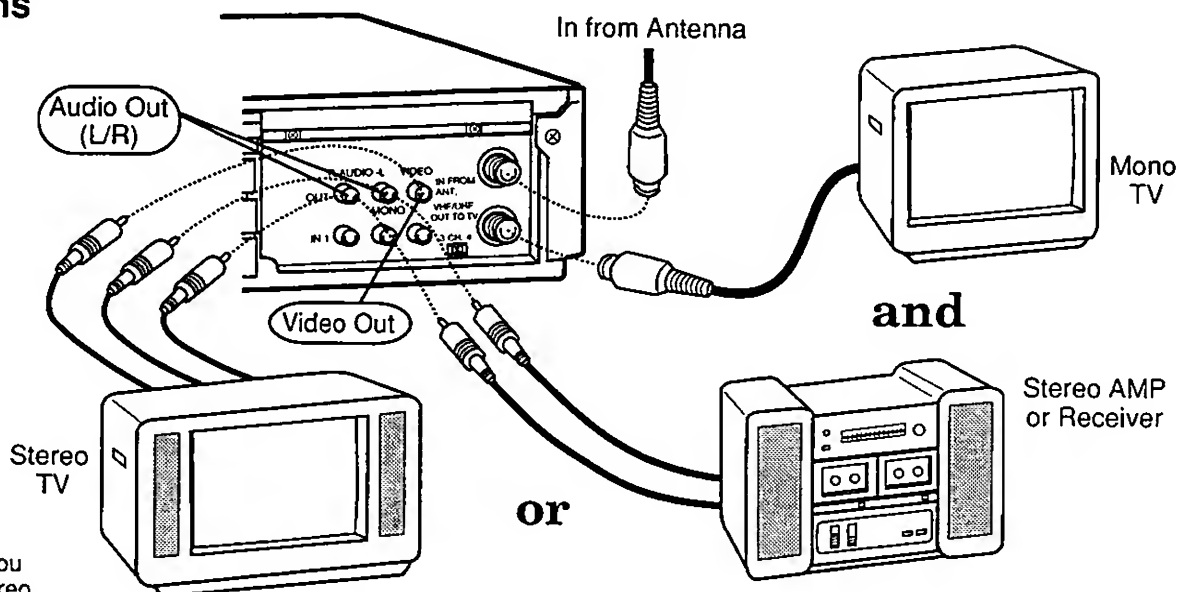

 When recording, you may monitor in stereo, by connecting the VCR to either a stereo TV, or a mono sound TV with an external stereo amp and speakers.




Multi Function Display

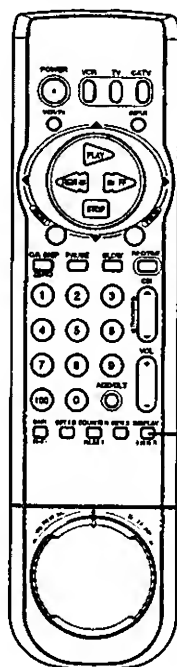

DISPLAY

## Receivable Broadcast Types

 The following are possible audio broadcast types and on-screen displays. Parenthesis indicate signal(s) not being received. The arrow indicates the selected audio mode.



Push DISPLAY to display the broadcast signal currently being received.

### MTS Stereo and SAP broadcast

Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously.

The "STEREO" and "SAP" indicators light in the Multi Function Display. Select STEREO or SAP audio mode.

```

STOP 12:00AM CH08
          0:00:00
SPATIALIZER ON SLP
STEREO ◀
SAP
MONO
    
```

### MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast. The "STEREO" indicator lights in the Multi Function Display. Select STEREO audio mode.

- If a stereo broadcast is weak and the display flickers, you may want to select the MONO audio mode for better results.

```

STOP 12:00AM CH08
          0:00:00
SPATIALIZER ON SLP
STEREO ◀
(SAP)
MONO
    
```

### SAP broadcast

Secondary Audio Program (sub language) broadcast. The "SAP" indicator lights in the Multi Function Display. Select SAP audio mode for the sub language.

```

STOP 12:00AM CH08
          0:00:00
SPATIALIZER ON SLP
(SAP)
STEREO ◀
SAP
MONO
    
```

### MONO broadcast

Normal monaural sound broadcast.

```

STOP 12:00AM CH08
          0:00:00
SPATIALIZER ON SLP
(SAP)
(SAP)
MONO ◀
    
```


Equipped with **dbx**® -TV Noise Reduction for true MTS reproduction. **dbx**® -TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**® is a registered trademark, and is licensed by **dbx**® Technology Licensing.



## With the proper audio mode setting, your VCR can:

- 1) record and playback an MTS stereo broadcast (main language) in stereo Hi-Fi.
- 2) record and playback a monaural broadcast (main language) or Secondary Audio Program (sub language) on the Hi-Fi tracks for better quality monaural sound.
- 3) playback non Hi-Fi tapes in monaural.

- When recording, the selected broadcast sound is always recorded on the left and right Hi-Fi tracks as well as the normal monaural track. This means your tapes can be played back on Hi-Fi as well as non-Hi-Fi VCRs.

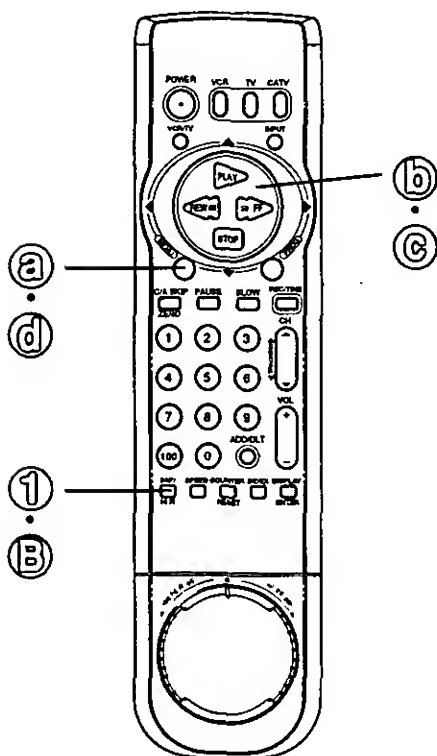

## Audio Mode for Recording

①



Push SAP/Hi-Fi repeatedly (each push within 5 seconds) to select the desired audio mode (STEREO, SAP, or MONO).

STEREO ◀  
SAP  
MONO

- Please refer to the "Receivable Broadcast Types" section on page 32.

- The arrow indicates your selection.

②

Do a recording.  
See the "Record On a Tape" section on page 20.

## Audio Mode for Playback

A

Playback the tape.  
See the "Playback a Tape" section on page 19.

B



Push SAP/Hi-Fi repeatedly (each push within 5 seconds) to select the desired audio mode (HIFI or NORMAL).

HIFI ◀  
NORMAL

- Select "HIFI" to listen to your stereo recordings with stereo sound, or "NORMAL" for monaural sound.

- The arrow indicates your selection.

## Spatializer Feature

This feature allows you to enhance the stereo sound so that it seems to surround you.  
**Note:** Your VCR needs to be hooked up to a stereo TV or stereo amp/receiver with speakers (see page 32). For playback, tapes must be recorded in Hi-Fi stereo. For TV viewing, programs must be broadcast in stereo.

a



Push MENU to display the menu.

```

----- MENU -----
SET UP VCR
SET CLOCK
SET UP CHANNEL
ID IOMA/ LANGUAGE: ENGLISH

SELECT: ▲ ▼ KEY
SET    : ► KEY
END    : MENU KEY
    
```

b



Push ▲▼ to select "SET UP VCR," and then push ► to display the "SET UP VCR" screen.

```

----- SET UP VCR -----
REPEAT PLAY : ON
BEEPER      : ON
SPATIALIZER : ON
SET UP COMMERCIAL ADV.

SELECT: ▲ ▼ KEY
SET    : ► KEY
END    : MENU KEY
    
```

c



Push ▲▼ to select "SPATIALIZER," and then push ► to select "ON" or "OFF."

d




Push MENU twice to return to the normal screen.



- When purchasing or renting prerecorded tapes, remember that only those recorded in Hi-Fi stereo will play back with true stereo sound. Standard stereo tapes will play back with monaural sound.
- In order to listen to Hi-Fi stereo playback, the VCR AUDIO (L/R) jacks must be connected to a stereo TV or an external stereo amp and speakers. (See page 32.)
- When adjusting the tracking during playback, the Hi-Fi audio sound may revert to normal audio sound. This is normal.
- There may be a difference in audio level between Hi-Fi and normal audio playback.
- Rec Level Meter will show the audio level during recording or playback.

More You Can Do

In order for the VCR to read the VCR Plus+ code, some set up is required. A Guide (VCR Plus+) channel number is assigned to each local broadcast and cable station. Because this number sometimes differs from the channel your TV receives the station on, it is necessary to program the VCR with local channel information.

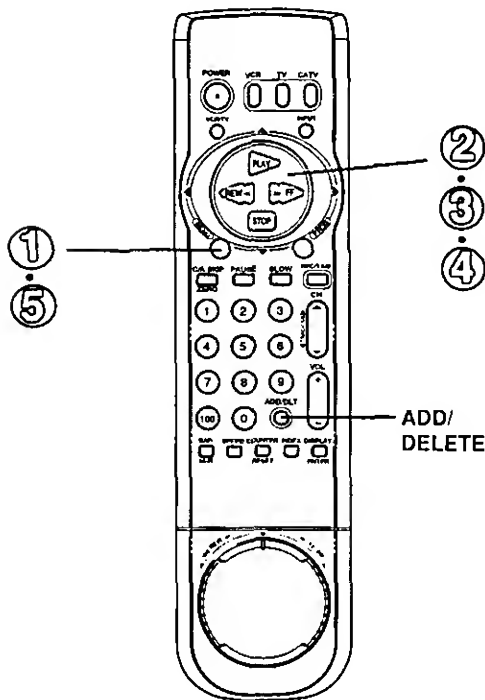


## VCR Plus+ Channel Setup For Connection Type 2 (on page 12) only

- Before you begin, complete the Channel Setup Preparations below left.

### Important Note:


If your VCR connection method changes from 1 to 2, perform "To setup the VCR in case a cable box or DSS receiver was installed or replaced" section on page 17 before proceeding with these steps.

- 1 Push MENU to display the menu.

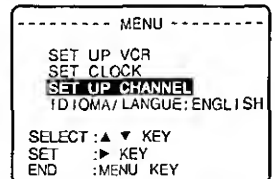

- 2 Push ▲▼ to select "SET UP CHANNEL," and then push ► to display the "SET UP CHANNEL" screen.

- 3 Push ▲▼ to select "VCR Plus+ CH SET UP," and then push ► to display the "VCR Plus+ CH SET UP" screen.

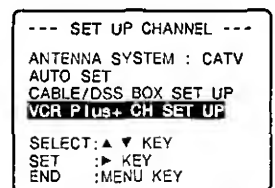

## Channel Setup Preparations

**NOTE:** Complete the steps on this page if your VCR hook-up resembles "2" on page 12.

Prepare a list like the example below. This list will help you smoothly enter the information needed in step "4" at right.

You will need the following to complete the list:

- A line up of normal and/or cable stations you receive along with the channel numbers your TV receives them on. A cable channel line-up chart is supplied by your cable company.
- A list of Guide (VCR Plus+) channel numbers assigned to the stations you receive. This list is available in *TV Guide* and the TV listings found in selected newspapers.

- 1 Make a chart with 3 columns like the example below. In the left column, fill in the name or call letters of the stations you receive.
- 2 In the middle column, fill in each station's assigned Guide (VCR Plus+) number found in *TV Guide*, newspapers, etc.
- 3 In the right column, fill in the channel number that your TV receives the station on from your channel line-up.


EXAMPLE ONLY

Broadcast or Cable Station Name	Assigned Guide (VCR Plus+) channel no.	Channel no. your TV receives the station on
HBO	33	15
Nickelodeon	38	20
CBS	04	04
FOX	11	

### IMPORTANT NOTE:

For step "4," use the list you prepared. You may leave lines blank if you don't receive that station, or if the GUIDE CH number and the CATV (or TV) CH numbers are the same.

- 4 Push ► to move the shaded area to the right side.

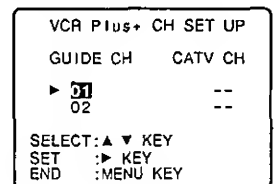


Then, push ▲▼ to change CATV or TV CH number.

Next, push ◀ to set the number.

Now, push ▲▼ to continue.

Repeat this operation until the list is complete.

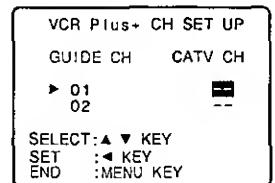

### To Make Corrections

Push ▲▼ and ► to select the incorrect CATV or TV CH number. Then, push ▲▼ to change, or ADD/DEL to delete the channel.

- 5 Push MENU three times to exit the VCR Plus+ CH SET UP mode.





- Make each entry within 5 minutes or the VCR will leave this mode.
- Once local channels have been programmed, they will stay in memory, even in the case of a power failure.


VCR Plus+C<sup>3</sup> and PlusCode are trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

**✓ Before you begin, make sure...**


- ☐ The clock is set.
- ☐ VCR Plus+ Setup is complete (see page 34).

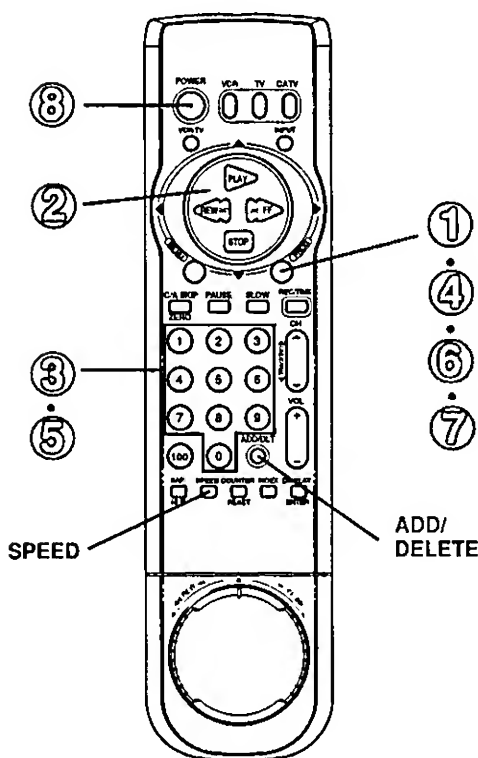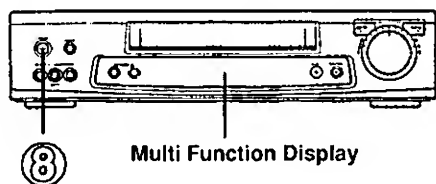

**1** ○ Push PROG to display the "SET PROGRAM" screen.

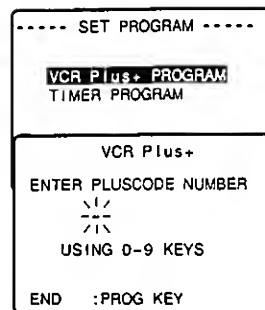

**2** ◀▶ Push ▲▼ to select "VCR Plus+ PROGRAM," and then push ▶ to display the "VCR Plus+" screen.

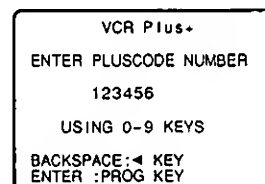


**3** Push the NUMBERED keys to enter the PlusCode number.  
• Refer to your local TV listings.

**To Make Corrections**

Push ◀ repeatedly to delete the PlusCode number. Then, enter the correct number.

**4** ○ Push PROG to lock in your program.

**5** Push the 1, 2 or 3 key to select the program type.

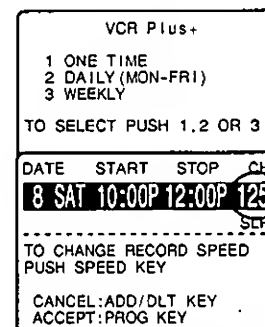


**To change the recording speed:**  
Push SPEED for SP, LP or SLP.

**To cancel program contents:**  
Push ADD/HLT.


- If you use connection type 1 on page 12, the channel shown in this on-screen display will always be the cable box output channel number.

**6** ○ Push PROG if contents are acceptable.

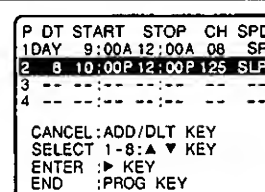

- If programs are overlapped, a warning screen will appear.


**7** ○ Push PROG to complete the program.

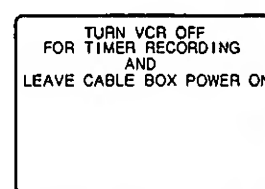

- When recording programs via a cable box, make sure the cable box is left on. If the cable box can not be controlled with the VCR, you must manually select the desired channel.

• This display may differ depending on your cable box hook-up.

 **8** ○ Push POWER off to set the timer.



**Use normal Timer Recording steps if:**

- the PlusCode for a program is not listed.
- you anticipate the program, such as a sporting event, to run over the scheduled stop time.

**See page 23 to:**


- cancel a timer recording in progress.
- replace program contents.
- review or clear program contents once set.

**Important notes when using a DSS receiver**

- When recording programs via a DSS receiver, the DSS receiver must be left on.
- When recording programs via an antenna or cable, the DSS receiver must be turned off.



- For a list of publications that carry the PlusCode numbers in your area, call 1 - 800 - 258 - 4827.
- You can obtain unlisted PlusCode numbers by calling 1 - 900 - 454 - 7587. Call costs approximately \$.95 per minute.
- VCR PlusCodes can not be used to program the VCR to record DSS channels.
- Avoid overlapping program times. (The overlapping programs will flash on the screen.)
- An on-screen display will indicate if an invalid PlusCode number has been entered or when all timer programs are full.

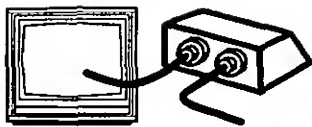

# Multi-Brand Control Feature


The Remote Control may be set up to control some of the functions on your TV or Cable Box.

## TV Brand Code Numbers

Panasonic .....	01, 02	Sylvania .....	05	JVC .....	11
Quasar .....	01, 02	Sharp .....	06, 07	Hitachi .....	12
RCA .....	03	Sony .....	08	Mitsubishi .....	07, 13
GE .....	03	Toshiba .....	09	Samsung .....	14
Zenith .....	04	Sanyo .....	10	Gold Star .....	15, 16, 17
Magnavox .....	05	Fisher .....	10		

## Cable Box Brand Code Numbers

Archer .....	01, 29, 44, 88, 91
Cableview ...	04, 30, 42, 44, 52, 63, 85, 88
Citizen .....	04, 30, 42, 44, 52, 63, 85, 88
Curtis .....	08, 09, 56, 61, 87, 90
Diamond .....	01, 29, 44, 88, 91
Drake .....	37, 67, 71
Eagle .....	13, 20, 22, 26, 40, 58, 62, 98
Eastern .....	28
GC Brand .....	04, 30, 42, 44, 52, 63, 85, 88
Gemini .....	04, 85
General Electric .....	57
General Instruments	
. 01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95	
Hamlin .....	14, 15, 28, 41, 97, 100, 102
Hitachi .....	31, 79
Jerrold	
. 01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95	
Macom .....	31, 79
Magnavox .....	25, 26
Matsushita .....	16, 17, 101
Movietime ...	29, 32, 38, 39, 40, 42, 44, 88
NSC .....	32, 38, 40
Oak .....	10, 11, 46, 99
Panasonic .....	16, 17, 101
Philips .....	13, 20, 23, 24, 96
Pioneer .....	05, 06, 78
Pulsar .....	04, 30, 42, 44, 52, 63, 85, 88
Radio Shack .....	44
RCA .....	16, 17, 101
Realistic .....	44, 51, 88
Regal .....	14, 41
Regency .....	28
Rembran .....	29, 32, 39, 42, 44, 88
Salora .....	68, 72
Samsung .....	32, 40, 42, 78, 94
Scientific Atlanta .....	08, 09, 56, 61, 87, 90
Sheritech .....	27
SL Marx .....	32, 40, 42, 78, 94
Spucer .....	16, 17, 101
Stargate	
..04, 30, 32, 40, 42, 44, 52, 63, 78, 85, 88, 94	
Sylvania .....	19
Teknika .....	74
Telecaption .....	77, 92
Televue .....	32, 40, 42, 78, 94
Texscan .....	18, 19
Tocom .....	01, 33, 34, 42, 48, 49, 91
Toshiba .....	36
Uniden Satellite .....	65, 69
Unika .....	01, 29, 44, 88, 91
Universal .....	42, 43, 44, 52, 63, 88
Viewstar .....	13, 20, 22, 26, 40, 58, 62, 98
Videoway .....	07, 23, 50
Vid Tech .....	64
Vidter .....	64
Zenith .....	07, 23, 50

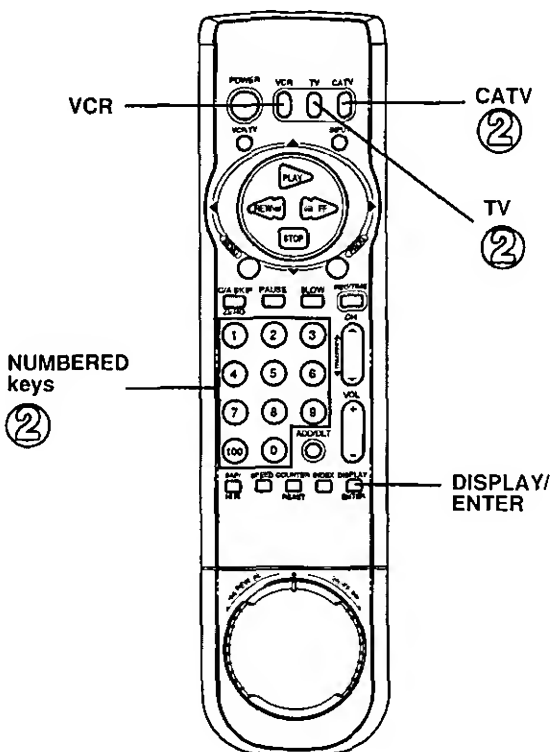

## Multi-Brand Control Setup

① Find your TV or Cable Box Brand Code Number from the chart at left.

② **TV** or **CATV** Hold down TV or CATV. Use the NUMBERED keys to enter your TV or Cable Box Brand code number.

- For code numbers 100 or greater, first push the 100 key. Then, enter the remaining digit. E.g. for 102, push 100, then push 2.

③ Try each of the functions on page 37.

- Due to changes in infra-red commands used by some manufacturers, some TV or Cable Box brands are listed more than once. If your TV or Cable Box does not respond to the first code, please try entering the next code.



- Please repeat the TV/Cable Box Set Up procedure when you replace the remote's batteries.
- The remote control is designed to control the brands listed. However, it will not operate all TVs or Cable Boxes made by these manufacturers. If you get no results, your particular product brand cannot be controlled by this remote control.

## Using the Multi-Brand Control

Once the remote control has been properly set up, you can select VCR, TV, or CATV mode depending on which functions you wish to control.



Push VCR or TV or CATV on the remote control to select the desired mode.

(See below for the controllable functions of each mode.)

### NOTE:

In TV or CATV mode, it may be necessary to push DISPLAY/ENTER after pushing NUMBERED keys for channel selection.

### VCR Mode

In VCR mode, the following buttons are available.

#### VCR

All function buttons.

#### TV

VOL UP/DOWN

### TV Mode

In TV mode, the following buttons are available.

#### TV

POWER, INPUT, NUMBERED keys, DISPLAY/ENTER, CH UP/DOWN, VOL UP/DOWN

#### VCR

VCR/TV, PLAY, STOP, FF, REW, PAUSE, SLOW, REC, SAP/Hi-Fi, SPEED, COUNTER RESET, C/A SKIP ZERO.

### CATV Mode

In CATV mode, the following buttons are available.

#### CATV




POWER, NUMBERED keys, DISPLAY/ENTER, CH UP/DOWN

#### TV

VOL UP/DOWN

#### VCR

VCR/TV, PLAY, STOP, FF, REW, PAUSE, SLOW, REC, SAP/Hi-Fi, SPEED, COUNTER RESET, C/A SKIP ZERO.

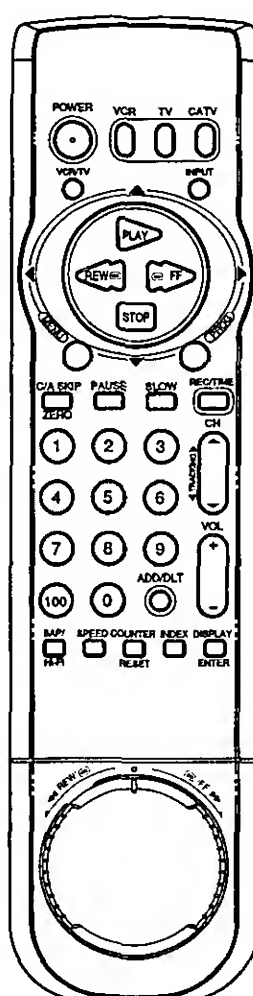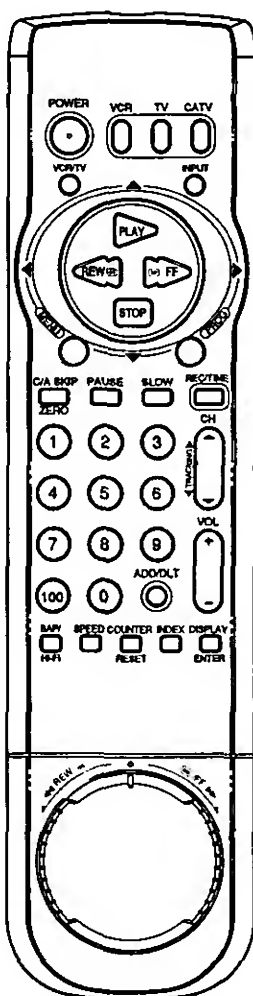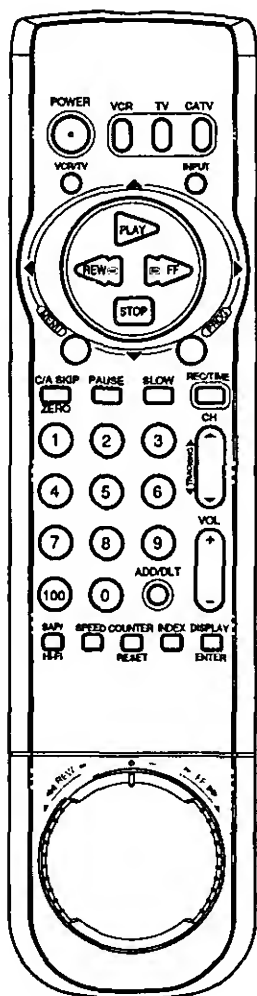

More You Can Do



- Some TV and Cable Box brands require you to turn on the power manually.
- Not all functions listed may be controlled by this remote control.



# Before Requesting Service

Check the following points once again if you are having trouble with your VCR.

Power	Correction
No power...	<ul style="list-style-type: none"><li>• Completely insert the Power Plug into an AC outlet.</li><li>• Set the POWER button to ON.</li></ul>
Recording & Playback	Correction
TV program cannot be recorded...	<ul style="list-style-type: none"><li>• Check connections between VCR, external antenna, and your TV.</li><li>• Make sure your antenna system (CATV or TV) is connected correctly. (To Replace Channels in Memory [P.17])</li><li>• Make sure that the record tab is intact on the cassette. (P.5)</li></ul>
Timer recording cannot be performed...	<ul style="list-style-type: none"><li>• Set the recording start/stop times correctly. (P.22)</li><li>• Make sure that the POWER button is set to OFF. (P.22)</li><li>• Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during, a Timer Recording, even if power resumes thereafter.</li></ul>
There is no playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"><li>• Select channel 3 or 4 on the TV to match the Channel 3/4 switch located on the rear panel of the VCR. (P.6)</li><li>• Set the VCR/TV selector to "VCR."</li><li>• Check that channel 3 or 4 of the TV is properly adjusted.</li><li>• Adjust the TRACKING control in either direction. (P.19)</li></ul>
Special effects playback, picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control...	<ul style="list-style-type: none"><li>• Set the TV's Vertical Hold Control to "MANUAL" and then adjust it.</li></ul>
VCR can't be controlled...	<ul style="list-style-type: none"><li>• Make sure that VCR LOCK is set to off. (P.31)</li></ul>
Remote Control	Correction
VCR cannot be remote controlled...	<ul style="list-style-type: none"><li>• Aim the Remote Control directly at the remote sensor on the VCR. (P.10)</li><li>• Avoid all obstacles which may interfere with the signal path.</li><li>• Inspect the remote batteries for possible replacement. (P.4)</li><li>• Make sure that VCR LOCK is set to off. (P.31)</li><li>• Exposing the VCR remote sensor to direct fluorescent or outdoor light may cause signal interference.</li></ul>
The MENU and PROG buttons can't be used...	<ul style="list-style-type: none"><li>• Push the VCR button to select VCR mode. (P.37)</li></ul>
Miscellaneous	Correction
Programs cannot be viewed on TV...	<ul style="list-style-type: none"><li>• Set the VCR/TV selector to "TV." (P.20)</li></ul>
Video cassette cannot be inserted...	<ul style="list-style-type: none"><li>• Insert cassette with window side up and the record tab facing you.</li></ul>
Video cassette cannot be removed...	<ul style="list-style-type: none"><li>• Completely insert the Power Plug into an AC wall outlet.</li></ul>
Video cassette ejects when a recording is started or the power is turned off for timer recording...	<ul style="list-style-type: none"><li>• Make sure the record tab is intact on the cassette. (P.5)</li></ul>
In Stop mode, the motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"><li>• To enable the quick play mechanism, the cylinder will rotate for about 5 minutes. This reduces response time from Stop to Play mode from Play to Rewind Search mode.</li></ul>
The top of the playback picture waves back and forth excessively...	<ul style="list-style-type: none"><li>• Because the VCR playback signal is not as stable as an off-the-air TV signal, the top of your TV screen may be bent or unstable during playback. To solve this problem, slowly turn the horizontal hold control on your TV to correct the wavy picture. If your TV does not have a horizontal hold control or adjusting the control does not help, please contact your local TV service center.</li></ul>

If you cannot resolve your problem, please call the Customer Satisfaction Center for product assistance at 201-348-9090.

To locate an authorized servicenter, please call toll free 1-800-545-2672.

# Service Center List

## PRODUCT INFORMATION • OPERATION ASSISTANCE • LITERATURE REQUESTS • DEALER LOCATIONS

**Customer Service Center** 2F-3, One Panasonic Way, Secaucus, NJ 07094 (Headquarters)  
201-348-9090 (9:00am-8:00pm Monday-Friday, EST)

## ACCESSORY PURCHASES

**Panasonic Services Company** 20421 84th Avenue South Kent, WA 98032  
(6 am to 6 pm Monday - Friday ; 6 am to 10:30 am Saturday ; PST)  
(Visa, Mastercard, Discover card, American Express, Check)

## AUTHORIZED SERVICENTERS • PARTS DISTRIBUTOR LOCATIONS

To locate an independent authorized servicer or parts distributor in your area,  
within the USA dial toll free 1-800-545-2672, 24 hours a day, 7 days a week.

## PRODUCT REPAIRS

### CALIFORNIA

6550 Katella Avenue  
Cypress, CA 90630  
Phone (714) 373-7426  
Fax (714) 894-8534  
800 Dubuque Avenue  
S. San Francisco, CA 94080  
Phone (415) 871-6373  
Fax (415) 871-6840  
20201 Sherman Way  
Suite 102  
Canoga Park, CA 91306  
Phone (818) 709-1775  
Fax (818) 709-2165  
3878 Ruffin Road  
Suite A  
San Diego, CA 92123  
Phone (619) 560-9200  
Fax (619) 560-1831

### COLORADO

1640 South Abilene Suite D  
Aurora, CO 80012  
Phone (303) 752-2024  
Fax (303) 752-0610

### FLORIDA

3700 North 29th Avenue  
Suite 102  
Hollywood, FL 33020  
Phone (954) 925-2880  
Fax (954) 925-5224  
4710 Eisenhower Boulevard  
Suite A1  
Tampa, FL 33634  
Phone (813) 884-4746  
Fax (813) 886-4564

## Factory Servicenters

### GEORGIA

8655 Roswell Road  
Suite 100  
Atlanta, GA 30350  
Phone (770) 518-6301  
Fax (770) 518-6306

### HAWAII

99-859 Iwaiwa Street  
Aiea, Hawaii 96701  
Phone (808) 488-4369  
Fax (808) 486-4369

### ILLINOIS

1703 North Randall Road \*  
Elgin, IL 60123  
"12:30 to 4:30, Mon-Fri"  
Phone (847) 468-5464  
Fax (847) 468-5465

9060 Golf Road  
Niles, IL 60714  
Phone (847) 608-1010  
Fax (847) 299-1710

### MARYLAND

Sulphur Springs  
Business Park  
1638 Sulphur Springs Road  
Baltimore, MD 21227  
Phone (410) 242-2607  
Fax (410) 247-3047

### MASSACHUSETTS

60 Glacier Drive, Suite G  
Westwood, MA 02090  
Phone (617) 329-4280  
Fax (617) 329-0586

\* pick-up/drop-off only

### MICHIGAN

37048 Van Dyke Avenue  
Sterling Heights, MI 48312  
Phone (810) 939-2060  
Fax (810) 939-2638

### MINNESOTA

7850-12th Avenue South  
Airport Business Center  
Bloomington, MN 55425  
Phone (612) 854-8624  
Fax (612) 854-2089

### OHIO

2236 Waycross Road  
Cincinnati, OH 45240  
Phone (513) 851-4180  
Fax (513) 851-8443

### PENNSYLVANIA

2221 Cabot Boulevard West  
Suite B  
Langhorne, Pa 19047  
Phone (215) 741-0661  
Fax (215) 741-0521

Chartiers Valley Shopping  
Center

1025 Washington Pike  
Bridgeville, PA 15017  
Phone (412) 257-4522  
Fax (412) 257-4650

### TENNESSEE

919-8th Avenue South  
Nashville, TN 37203  
Phone (615) 244-4434  
Fax (615) 244-6713

### TEXAS

7482 Harwin Drive  
Houston, TX 77036  
Phone (713) 781-1528  
Fax (713) 781-0643

13615 Welch Road

Suite 101  
Farmers Branch, TX 75244  
Phone (972) 385-1975  
Fax (972) 960-7626

### WASHINGTON

20425-84th Avenue South  
Kent, WA 98032  
Phone (206) 872-7922  
Fax (206) 872-0918

## Service in Puerto Rico

**Matsushita Electric  
of Puerto Rico, Inc.  
Panasonic Sales Company/  
Factory Servicer**  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985  
Phone (787) 750-4300  
Fax (787) 768-2910

## REPAIR INQUIRIES

### EAST (PCE)

2221 Cabot Boulevard West  
Suite A  
Langhorne, PA 19047  
Phone (215) 741-0676  
Fax (215) 750-6492

#### Covers:

CT, DE, ME, MD, MA, NH, NJ,  
NY, PA, RI, VT, VA, WV

## Regional Customer Care Department

### EAST (PCE)

1225 Northbrook Parkway  
Suite 2-390  
Suwanee, GA 30174  
Phone (770) 338-6860  
Fax (770) 338-6548

#### Covers:

AL, FL, GA, MS, NC, SC, TN

### CENTRAL (PCC)

1707 North Randall Road  
Elgin, IL 60123  
Phone (847) 468-5530  
Fax (847) 468-5528

#### Covers:

AR, IL, IN, IA, KS, KY, LA,  
MI, MN, MO, NE, ND, OK,  
SD, TX, WI, OH

### WEST (PCW)

6550 Katella Avenue  
Cypress, CA 90630  
Phone (714) 373-7440  
Fax (714) 373-7447

#### Covers:

AK, AZ, CA, CO, ID, MT, NV,  
NM, OR, UT, WA, WY, HI

# Warranty

Panasonic Consumer Electronics Company,  
Division of Matsushita Electric Corporation  
of America,  
One Panasonic Way  
Secaucus, New Jersey 07094

Panasonic Sales Company,  
Division of Matsushita Electric of Puerto Rico, Inc.  
AVE. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985

## PANASONIC Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

<u>PRODUCT</u>	<u>PARTS</u>	<u>LABOR</u>
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS
VCR	ONE (1) YEAR	NINETY (90) DAYS
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS
MONITOR-VCR	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS CUSTOMER PAYS ALL LABOR CHARGES AFTER 90 DAYS

**Monitor-VCR In-home or carry-in Service: 19" (diagonal) CRT / LCD and Larger**  
**Monitor-VCR Carry-in Service: 18" (diagonal) CRT / LCD and smaller**

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free 1-800-545-2672, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

 
SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 2/11/97




# Spanish Quick Use Guide/Guía para rápida consulta

**Fijación del idioma de la pantalla, fijaciones para la conexión con la caja de TV por cable y receptor DSS, memorizar los canales y fijación automática de la hora.**



**1** Encienda el televisor y la videograbadora.

**2** Sintonice el televisor al canal de salida de la videograbadora (el mismo canal que ha fijado en la parte trasera de la videograbadora; canal 3 o 4).

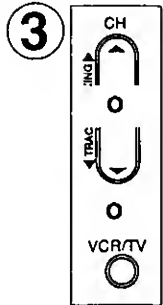


**3** Oprimir CH ▲ para elegir el idioma de la pantalla en inglés.

Oprimir CH ▼ para elegir el idioma de la pantalla en español.

Oprimir VCR/TV para elegir el idioma de la pantalla en francés.

SELECT LANGUAGE  
PUSH VCR CH ▲: ENGLISH  
PULSE VCR CH ▼: ESPAÑOL  
APP. VCR TV : FRANÇAIS

 
- La videograbadora debe conectarse a una antena o caja de TV por cable.



**4** Oprimir ▲▼ para elegir, y luego oprimir ► para fijar su conexión.

- Si ud. ha elegido CABLE/DSS► VCR►TV, continúe al paso 5.
- Si no, siga las instrucciones alternativas de la página 42.

 ELEGIR LA CONEXION  
CABLE/DSS►VCR►TV  
VCR►CABLE/DSS►TV  
VCR►TV  
ELEGIR:▲▼  
FIJAR:►  
TERMINAR:MENU



**5** Oprimir ▲▼ para elegir el canal de salida de la caja de TV por cable o el receptor DSS, y luego oprimir ► para fijar.

ELEGIR LA CONEXION  
CABLE/DSS►VCR►TV  
SALIDA DEL CABLE/DSS  
CA 01  
ELEGIR:▲▼  
FIJAR:►  
TERMINAR:MENU

- Si está usando los dos, fije el canal de salida del receptor DSS.
- Si ud. está usando los terminales de audio/video para la conexión de la caja de TV por cable, elija y fije a "SALIDA DE VIDEO" para el canal de salida.



**6** Oprimir ▲▼ para elegir el número de código de la caja de TV por cable o el receptor DSS, y luego oprimir ► para fijar. (Consulte su lista de la página 13.)

INTRODUCIR NUMERO/CODIGO  
REFERIENDO AL MANUAL  
01  
ELEGIR:▲▼  
FIJAR:►  
TERMINAR:MENU

- Si su caja de TV por cable o su receptor DSS no tiene un control remoto, elija "SIN CONTROL REMOTO."
- Luego, siga las instrucciones alternativas de la página 42.



 
**7** Si ud. usa una caja de TV por cable, sintonice al canal 2. Si usa un receptor DSS, sintonice al canal 270.



Oprimir ► para continuar.

Caja de TV  
POR FAVOR SINTONICE SU  
CAJA DE TV POR CABLE AL  
CANAL 02.  
Receptor DSS  
POR FAVOR SINTONICE SU  
RECEPTOR DSS AL CANAL 270  
PROCEDER:►  
TERMINAR:MENU

- "ESTA TRANSMITIENDO" aparece.



**8** Oprimir ▲▼ para elegir "SI" o "NO," y luego oprimir ► para fijar.

Si ud. usa una caja de TV por cable y ha elegido "SI," siga al paso 9.

Si ud. usa un receptor DSS y ha elegido "SI," siga las instrucciones alternativas de la página 42.

Si ha elegido "NO," aparecerá de nuevo la pantalla del paso 6.

Intente fijar un código diferente para su marca y/o cambie la conexión de su equipo.

Si su respuesta es todavía "NO," el control de la caja de TV por cable o el receptor DSS no es disponible.

Oprimir MENU y pase a las instrucciones alternativas de la página 42.

 
Caja de TV  
ESTA RECIBIENDO SU CAJA  
DE TV POR CABLE EL  
CANAL 09 ?  
SI  
NO  
Receptor DSS  
ESTA RECIBIENDO SU  
RECEPTOR DSS EL CA. 200?  
SI  
NO  
ELEGIR:▲▼  
FIJAR:►  
TERMINAR:MENU

Verifique que su caja de TV por cable esté encendido y su receptor DSS esté apagado.



**9** Oprimir ▲▼ para elegir el canal PBS de su local que está recibiendo en su caja de TV por cable, y luego oprimir ► para que aparezca la pantalla "FIJACION AUTO. (RELOJ)."


FIJAR EL CANAL PBS DE TV  
POR CABLE DE SU LOCAL  
CA 01  
ELEGIR:▲▼  
FIJAR:►  
TERMINAR:MENU



**10** Oprimir CH ▲ para iniciar la fijación automática del reloj.

- Si ud. vive cerca de una zona con diferente hora, fije el canal de su zona.
- "FIJACION AUTOMATICA DE RELOJ EN PROCESO" aparece.

 FIJACION AUTO. (RELOJ)  
CONECTE EL CABLE DE LA  
ANTENA Y SI ESTA USANDO  
UNA CAJA DE TV POR CABLE  
SINTONICE AL CANAL PBS  
DE SU LOCAL LUEGO...  
POR FAVOR OPRIMIR CH UP



**11** Esta pantalla aparece cuando la fijación automática del reloj es completo.

Comprobar si la hora está fijada correctamente y luego oprimir CH ▲ para terminar la fijación.

7/25/1997 VIE 12:00PM  
HORA VERANIEGA:ACT  
CANAL FIJADO : CA 02  
FIJACION AUTOMATICA  
COMPLETO  
TERMINAR : PULSE CH UP

## Si la hora fijada automáticamente es incorrecto

Si ud. usa una caja de TV por cable y recibe emisiones de más de un canal PBS, intente fijar automáticamente otravez. Siga la "Si la hora veraniega es incorrecta" en la página 42 y cuando las instrucciones de la pantalla requiere la fijación del canal PBS, fije un canal que no ha intentado anteriormente.




- La fijación automática de la hora se efectuará cada día al apagar la videograbadora por primera vez. Si ud. usa una caja de TV por cable y desea efectuar la fijación automática de la hora, la caja de TV por cable debe permanecer encendido y sintonizado al canal PBS cuando la videograbadora se apaga.

# Spanish Quick Use Guide/Guía para rápida consulta

## Si aparece en la pantalla FIJACION DEL RELOJ INCOMPLETO

La pantalla a la derecha aparecerá si no es disponible en su zona la fijación automática de la hora.

Oprimir MENU para ver la pantalla de la fijación manual del reloj. (Consulte la "Fijación manual del reloj" en esta página).

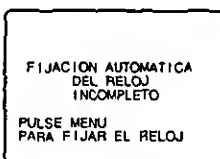

### Notas:

Si ud. usa una caja de TV por cable y recibe emisiones de más de un canal PBS, ud. debe salir desde la pantalla de la fijación del reloj manual e intente fijar automáticamente otra vez.

Siga la "Si la hora veraniega es incorrecta" en esta página y cuando las instrucciones de la pantalla requiere la fijación del canal PBS, fije un canal que no ha intentado anteriormente.


## Instrucciones alternativas

Complete los siguientes pasos si ha efectuado una de las siguientes explicaciones.

- A Ud. ha elegido la segunda conexión (VCR►CABLE/DSS►TV o VCR►TV) en el paso 4 de la página 37.
- B Ud. ha elegido "SIN CONTROL REMOTO" en el paso 6 de la página 41 (su caja de TV por cable o receptor DSS no tiene un control remoto).
- C Ud. está usando un receptor DSS y ha elegido "SI" en el paso 8 de la página 41.
- D No se puede controlar la caja de TV por cable o receptor DSS en el paso 8 de la página 41.

- 1 Encienda la caja de TV por cable y fije la caja de TV por cable al canal PBS de su local.

- Si ud. vive cerca de una zona con diferente hora, asegúrese de fijar el canal de su zona.
- Si ud. usa un receptor DSS, éste debe estar apagado.

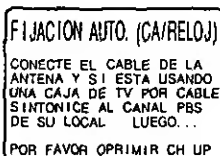


- 2 Oprimir CH ▲ para iniciar la fijación automática de los canales y la fijación de la hora.

- Aparece las siguientes informaciones: "AUTOPROGRAMACION EN PROCESO" "FIJACION AUTOMATICA DEL RELOJ EN PROCESO"

Esta pantalla aparece para informarle que la fijación automática de la hora es incompleto.

- 3 Oprimir CH ▲ para comprobar si la hora está fijada correctamente y luego oprimir CH ▲ para terminar la fijación.

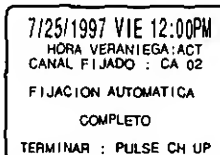

Si aparece esta pantalla, la fijación automática no es disponible en su zona. Por favor fije la hora manualmente como describe al siguiente.




## Si la hora y la hora veraniega es incorrecta

Raras veces, en caso de que ud. vive cerca de dos zonas con hora diferente, el aparato puede elegir un canal PBS con diferente hora de su zona. En este caso, haga los siguientes pasos:

- 1 Tome nota del canal que está fijado en la pantalla y salga desde este modo oprimiendo el botón CH ▲.
- 2 Anule este canal desde los canales memorizados en la combinación de VCR/TV.
- 3 Oprima el botón MENU para que aparezca la pantalla del MENU.
- 4 Oprimir ▲▼ para elegir "FIJAR RELOJ" y luego oprimir ► para que aparezca la pantalla de "FIJAR RELOJ."
- 5 Oprimir ▲▼ y ► para elegir y fijar "AUTOMATICO."
- 6 Siga las instrucciones en la páginas 41 y 42.
  - Si ud. está usando una caja de TV por cable y tiene muchos canales PBS, sintonice la caja de TV por cable a un canal PBS diferente e intente la fijación automática otra vez.

## Fijación manual del reloj

- 1 Oprimir MENU para que aparezca la pantalla de la fijación del reloj.

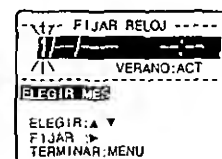

- 2 Oprimir ▲▼ y ◀▶ para elegir y fijar el mes, la fecha, el año, la hora y la hora veraniega.

### Para hacer correcciones


Oprimir ◀▶ sucesivamente para avanzar o para retroceder hasta el paso que desea corregir.

- 3 Oprimir MENU dos veces para iniciar a funcionar el reloj y salir desde este modo.



## Fijación o cambio del reloj

- 1 Oprimir MENU para que aparezca la pantalla del menú.

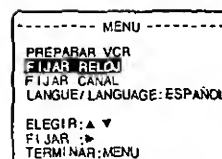


- 2 Oprimir ▲▼ para elegir "FIJAR RELOJ" y luego oprimir ► para que aparezca la pantalla de "FIJAR RELOJ."

- 3 Oprimir ▲▼ para elegir "MANUAL" y luego oprimir ► para que aparezca la pantalla de la fijación del reloj.








- 4 Oprimir ▲▼ y ◀▶ para elegir y fijar la hora y la fecha.

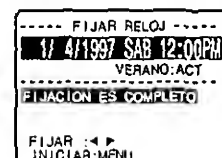

   - 5 Oprimir MENU dos veces para iniciar a funcionar el reloj y salir desde este modo.










## Operaciones básicas para la reproducción

-  Introducir una cinta. Esta indicación aparece en la pantalla multifuncional. 
-  Oprimir PLAY en el control remoto o en la videograbadora para comenzar a reproducir.
-  Oprimir STOP en el control remoto o en la videograbadora para parar la reproducción.
-  Oprimir EJECT para expulsar la cinta.

### Para buscar una escena en particular durante la reproducción

   
-   Oprimir REW o FF durante la reproducción para buscar una escena.
- La velocidad de búsqueda es a 9 veces más rápida que la velocidad normal para el modo SP y 27 veces más rápida para el modo SLP.

## Operaciones básicas para la grabación

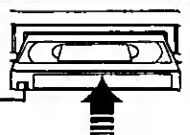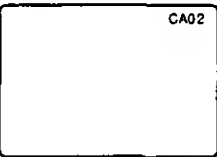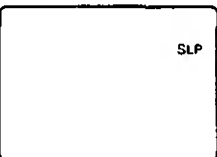-  Introducir una cinta con la lengüeta. 
  - La videograbadora se enciende automáticamente.
-  Oprimir CH ▲/▼ o las teclas numéricas para elegir el canal. 
  - Para grabar desde una fuente externa, oprimir CH ▲/▼ o INPUT para seleccionar "LINEA1" o "LINEA2."
-  Oprimir SPEED para cambiar la velocidad de la cinta. 
  - SP = Reproducción estándar
  - LP = Larga duración
  - SLP = Superlarga duración
-  Oprimir REC/TIME en el control remoto o videograbadora para empezar a grabar.
  - Oprimir PAUSE para hacer una pausa en la grabación en progreso.


### Grabación de un toque (OTR)

 
La videograbadora termina la grabación a una hora programada. En el paso 4, oprimir repetidamente REC/TIME para fijar el tiempo de grabación. Cada presión cambiará la hora de parada como demuestra al siguiente.




-  Oprimir STOP para parar la grabación.

## Programación fácil para la grabación con temporizador


-  Oprimir PROG para que aparezca la pantalla "FIJAR PROGRAMACION."
-  Oprimir ▲▼ para elegir "TEMPORIZADOR" y luego oprimir ► para exhibir la pantalla de la programación.

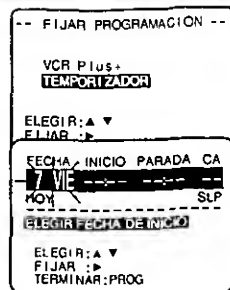


- Si ya existe una programación memorizada, oprimir ▲▼ y ► para elegir un número sin programación.

-  Oprimir ▲▼ y ► para elegir y fijar uno de los siguientes:
  - 1~31 = Grabación de una sola vez
  - DIARIO = A una misma hora LUN~VIE
  - SEMANAL = Una vez a la semana a una misma hora

#### Ejemplo

 


-  Oprimir ▲▼ y ◀▶ para elegir y fijar las fijaciones.
 


**Fijaciones:**

  - Hora de inicio • Hora de parada
  - Canal o LINEA para una fuente externa.
  - Velocidad de la cinta (SP, LP, SLP).


#### Para hacer correcciones


Oprimir ► sucesivamente para avanzar u ◀ para retroceder hasta el paso que desea corregir.

-  Oprimir PROG para terminar la programación.

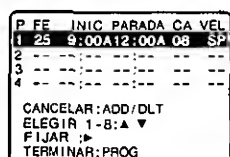


Si usa un receptor DSS y fija un canal de 100~125, aparecerá la pantalla a la derecha.


-  Oprimir ▲▼ para elegir "DSS" o "CABLE" y luego oprimir ► para fijar.
  - La pantalla para la confirmación como demuestra arriba aparecerá luego de la fijación.

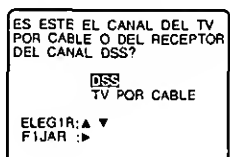

#### Para hacer más programaciones

Oprimir ▲▼ y ► para elegir y fijar un número de programa en blanco y luego repita los pasos 3 y 4.

-  Oprimir PROG para salir desde este modo y volver a la pantalla normal.

-  Oprimir POWER y apague el aparato para la grabación con temporizador.




- Si la fuente de la grabación es una caja de TV por cable, asegúrese de que la caja de TV por cable esté encendido. Si la caja de TV por cable no puede ser controlado mediante la videograbadora, ud. deberá elegir el canal deseado manualmente.


# Quick Use Guide

This guide should only be used once you are familiar with the operations inside this manual. If you have any problems or need more information, please refer to the page listed.


## Clock Reset (page 17)

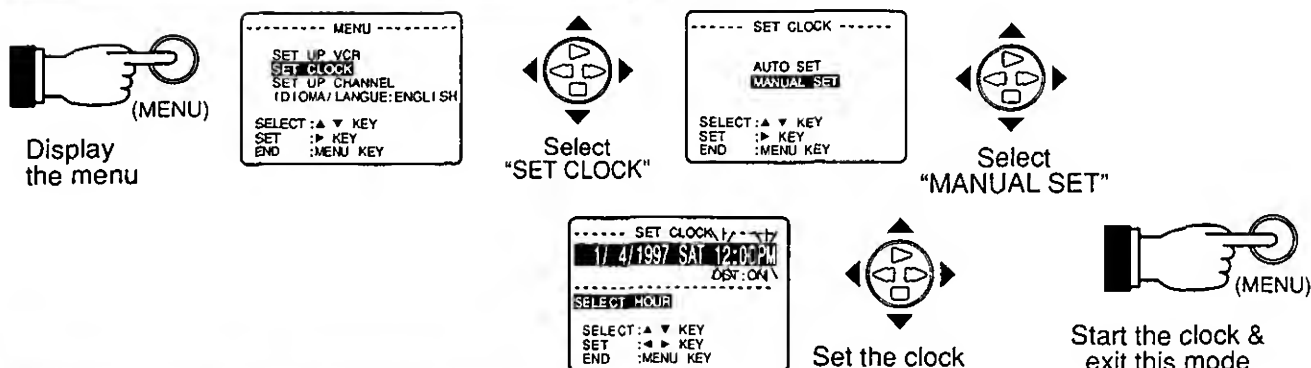


## Playback a Tape (page 19)

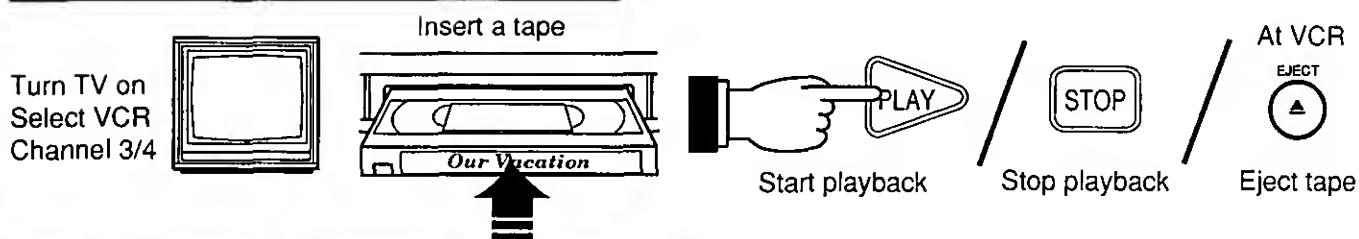

## Make a Recording (page 20)

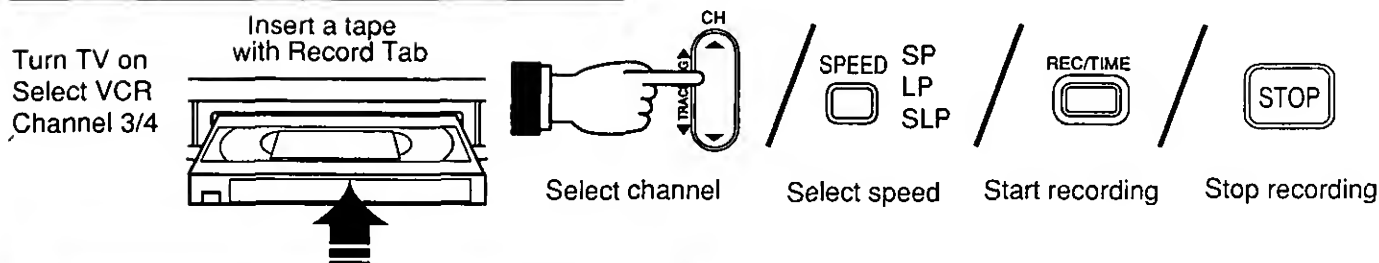

## Set a Timer Recording (page 22)

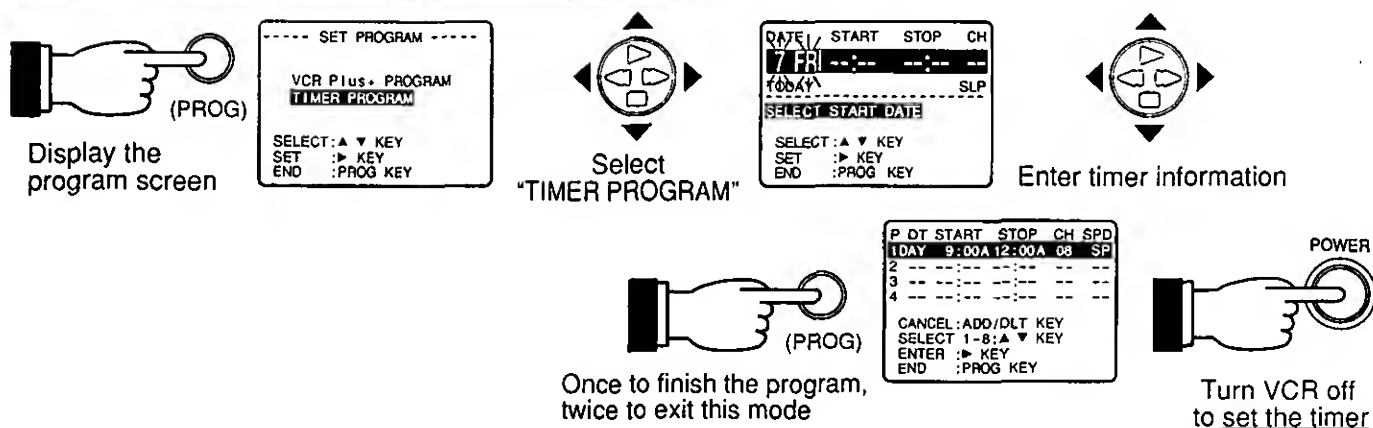

Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America  
One Panasonic Way Secaucus,  
New Jersey 07094

Panasonic Sales Company,  
Division of Matsushita Electric of  
Puerto Rico, Inc. ("PSC")  
Ave. 65 de Infantería. Km. 9.5  
San Gabriel Industrial Park, Carolina,  
Puerto Rico 00985

Printed in Japan  
VQTS3324 (A)

